H.264 Network DVR

User Manual

GUI Display with USB Mouse Control

Please read instructions thoroughly before operation and retain it for future reference.

For the actual display & operation, please refer to your DVR in hand.

IMPORTANT SAFEGUARD

	CAUTION **RISK OF ELECTRIC SHOCK**	

CAUTION:

To reduce the risk of electric shock, do not expose this apparatus to rain or moisture. Only operate this apparatus from the type of power source indicated on the label. The company shall not be liable for any damages arising out of any improper use, even if we have been advised of the possibility of such damages.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

All lead-free products offered by the company comply with the requirements of the European law on the Restriction of Hazardous Substances (RoHS) directive, which means our manufacture processes and products are strictly “lead-free” and without the hazardous substances cited in the directive.

The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste. Contact your local dealer for procedures for recycling this equipment.

This apparatus is manufactured to comply with the radio interference requirements.

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Trademark Acknowledgements

iPhone® is the registered trademark of Apple Inc.

BlackBerry® and related trademarks, names and logos are the property of Research In Motion Limited and are registered and/or used in the U.S. and countries around the world. Used under license from Research In Motion Limited.

Microsoft®, Windows®, Internet Explorer®, Mozilla® Firefox®, Google Chrome™, QuickTime®, Windows® Mobile & Symbian® mentioned in this document are the registered trademarks of their respective holders.

Disclaimer

The information in this manual was current when released. We reserve the right to revise or remove any content in this manual at any time. We do not warrant or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of this manual. For the actual display & operation, please refer to your DVR in hand. The content of this manual is subject to change without notice.

Grounding

This is a Safety Class 1 Product (provided with a protective earthing ground incorporated in the power cord). The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. Any interruption of the protective conductor inside or outside of the instrument is likely to make the instrument dangerous. Intentional interruption is prohibited.

Water & Moisture

Do not expose this product to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.

MPEG4 Licensing

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (“MPEG-4 VIDEO”) AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM.

GPL Licensing

This product contains codes which are developed by Third-Party-Companies and which are subject to the GNU General Public License (“GPL”) or the GNU Lesser Public License (“LGPL”).

The GPL Code used in this product is released without warranty and is subject to the copyright of the corresponding author.

Further source codes which are subject to the GPL-licenses are available upon request.

We are pleased to provide our modifications to the Linux Kernel, as well as a few new commands, and some tools to get you into the code. The codes are provided on the FTP site, and please download them from the following site or you can refer to your distributor:

http://download.dvrtw.com.tw/GPL/DVR/H-Seriers/linux.tar.gz

TABLE OF CONTENTS

1. BEFORE USING THIS DVR 1

1.1 Package Content 1

1.2 Front Panel 1

1.3 Rear Panel 2

2. CONNECTION AND SETUP 4

2.1 SATA HDD Installation 4

2.2 Camera Connection 6

2.2.1 Normal Camera Connection 6

2.2.2 PTZ Camera Connection 7

2.3 External Device Connection 8

2.4 DVR Power On 9

2.5 Date and Time Setting 9

2.6 Clear Hard Disk 10

2.7 Password Setting 10

3. GUI DISPLAY WITH USB MOUSE CONTROL 12

3.1 Connect USB Mouse 12

3.2 Quick Menu Bar 12

3.2.1 Channel Switch 13

3.2.2 PTZ Control Panel 13

3.3 Main Menu 14

4. BASIC OPERATION 15

4.1 Live Page 15

4.2 Record Icon 15

4.3 Playback 16

4.3.1 Playback Control 16

4.3.2 Event Search 17

4.3.3 Audio Playback 17

4.4 User Level Switch 17

4.5 System Sources Reallocation *(For 4CH Models Only)* 18

5. FREQUENTLY-USED FUNCTIONS 19

5.1 Push Video Configuration 19

5.1.1 PIN Connection 19

A2.2 Configuration 20

5.2 Quick Search 22

5.3 Record 23

5.3.1 Quick record setting 23

5.3.2 Detailed record setting 24

5.4 Schedule Setting 25

5.4.1 Record Timer 25

5.4.2 Detection Timer 26

5.4.3 Alarm Timer 26
5.5 Detection Setting 27
5.6 PTZ Camera Setting 28
5.7 System Setting 29
5.7.1 Password Setting 29
5.7.2 System Upgrade 29
5.7.3 Backup & Restore Configurations 30
5.7.4 Video Backup 30
5.7.5 Event Log Backup 32
5.7.6 Clear All HDD Data 33
5.8 Network 33
5.8.1 STATIC 33
5.8.2 PPPOE 34
5.8.3 DHCP 35
5.8.4 DDNS 35
5.9 Event Notifications 36
5.9.1 FTP 36
5.9.2 E-MAIL 37
5.10 VGA Output Resolution Support 38
5.11 System Sources Reallocation *(For 4CH Models Only)* 39
6. REMOTE OPERATION 40
6.1 Supplied Licensed Software 40
6.1.1 Installation & Network Connection 40
6.1.2 Control Panel Overview 42
6.1.3. General Operation 44
6.1.4. E-Map 48
6.2 Web Browser 53
6.2.1 Event Download & Playback 55
APPENDIX 1 SPECIFICATIONS 57
APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST 67
APPENDIX 3 COMPATIBLE SATA HDD LIST 68
APPENDIX 4 MAIN MENU STRUCTURE 69
APPENDIX 5 DVR BATTERY REPLACEMENT 71
APPENDIX 6 PIN CONFIGURATION 72
A6. Models without HD video output 72
A2. Models with HD video output 76
APPENDIX 7 MOBILE SURVEILLANCE VIA EAGLEEYES 79
A7.1 Prerequisites 79
A7.2 Where to download 79
APPENDIX 8 DVD- / CD-ROM COMPATIBLE LIST 80
APPENDIX 9 DVD WRITER INSTALLATION 82

1. BEFORE USING THIS DVR

1.1 Package Content

➢ **Standard Package**

☐ DVR
☐ IR remote controller
☐ Adapter & power cord
☐ HDD screws
☐ Manual for IR remote controller

➢ **Optional Accessories**

☐ IR Receiver extension cable
☐ USB Mouse
☐ CD manual
☐ I/O board

1.2 Front Panel

1) LED Indicators

*	An alarm is triggered.	HDD	HDD is reading or recording.
*	Timer recording is on.		DVR is powered on.
*	Under playback status.		

** For selected models only*

2) ⏸ (▲) / ■ (▼) / ⏮ (◄) / ⏭ (►)

Press ▲ / ▼ / ◄ / ► to move up / down / left / right.
In the playback mode:
Press "⏸" to pause playback.
Press "■" to stop playback.
Press "⏭" to fast forward.
Press "⏮" to fast rewind.

3) MENU

Press "MENU" to enter the main menu.

4) ENTER

Press "ENTER" to confirm the setting.

5) LIST (Event List Search)

Press to quickly search the recorded files by event lists: RECORD / MOTION / ALARM / TIME, or select FULL to show all the event logs.
To quickly search the time you want, select "QUICK SEARCH". Set the time range you want, and select "SUBMIT" to play the recorded video clip during the specified time.

6) PLAY

Press to playback the latest recorded data.

7) SLOW

In the playback mode, press to show slow playback.

8) ZOOM

Press to enlarge the picture of selected channel in the FRAME or FIELD recording mode.

9) SEQ

Press to display each channel in full screen one by one starting from CH1. When the last channel is displayed, it will repeat from CH1 again. To exit this mode, press “SEQ” again.

10)

Press to show the 4-channel display mode.

11) CH1 ~ 16 / 1 ~ 8 / 1 ~ 4

Press the channel number keys to select the channel to display.

12) AUDIO (SLOW + ZOOM)

Press “SLOW” + “ZOOM” to select live or playback audio from audio channel 1~4.

Live audio from audio channel 1~4 (indicated in white)	Playback audio from audio channel 1~4 (indicated in yellow)
Audio channel unselected	

13) P.T.Z. (+ SEQ)

Press “ ” + “SEQ” at the same time to enter / exit the PTZ control mode.

14) USB port

There are two USB ports on the front panel, one for connecting your USB mouse for mouse control, and the other one for connecting your USB flash drive for video backup.

Note: It’s not allowed to have two USB mice or two USB flash drives connected on the front panel.

For the compatible USB flash drive list, please refer to “APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST” at page 67.

15) ⏏ *(For selected models only)*

Press “⏏” to open / close the DVD writer.

1.3 Rear Panel

1) 75Ω / HI-IMPEDANCE *(For Selected Models Only)*

When using Loop function, please switch to HI-IMPEDANCE. When you don’t use Loop function, please switch to 75Ω.

2) INPUT (1 ~ 16 / 1 ~ 8): Connect to the video connector of a camera.
VIDEO IN (1 ~ 4): Connect to the video connector of a camera.
LOOP (1 ~ 16 / 1 ~ 8) *(For Selected Models Only)*: Video output connector.

Note: The DVR will automatically detect the video system of the camera, please make sure that the cameras are properly connected to the DVR and power-supplied before the DVR is turned on.

3) AUDIO IN

Connect to the audio connector of a camera if the camera supports audio recording.

Note: To make a video backup with audio, make sure the camera which supports the audio function is connected to the video-in channel and audio-in channel. For example, the audio data from audio CH1 will be recorded with the video data from video CH1.

4) AUDIO OUT

Connect to a speaker with 1 mono audio output.

Note: To know how many audio outputs your DVR supports, please refer to its specifications.

5) MONITOR

Connect to a CRT monitor for video output.

6) CALL *(For Selected Models Only)*

Connect to a monitor specific for sequence display.

7) VGA

Connect to a LCD monitor directly.

8) HD Display *(For Selected Models Only)*

Connect to the port of the monitor which supports HD video output.

9) IR *(For Selected Models Only)*

Connect the optional IR receiver extension cable for remote control.

10) EXTERNAL I/O

This port is used to connect external devices (such as speed dome cameras or external alarm, etc).

For detailed I/O port PIN configuration, please refer to “APPENDIX 6 PIN CONFIGURATION” at page 72.

11) LAN

Connect to Internet by LAN cable.

12) DC IN

Connect to the supplied adapter.

13) Power Switch

Switch to “**I**” to turn on the power, and “O” to turn off the power.

2. CONNECTION AND SETUP

Before the DVR is powered on, make sure you have installed a hard disk and connected at least one camera. For details, please refer to the following sections.

Note: The DVR is designed to automatically detect the video system of the connected cameras (NTSC or PAL). To make sure the system detection is correct, please check if the cameras are connected to the DVR and power-supplied before the DVR is powered on.

2.1 SATA HDD Installation

A SATA HDD must be installed before the DVR is powered on.

Note: It's recommended to clear all data in the hard disk when the DVR is powered on and the date & time are set correctly to ensure the recorded data are not mixed with other data previously saved in the same hard disk. For details, please refer to "5.7.6 Clear All HDD Data" at page 32.

➢ **For 16CH & 8CH Models**

Step1: Loose the screws on the upper cover and open the upper cover of the DVR.

Note: The DVR cover is made of metal. Please be careful with its edge when you remove the cover.

Step2: There are two HDD brackets for this DVR as indicated on the right picture.

2-1 To install on the first bracket

Remove the bracket, and align the screw holes of the bracket with the HDD's screw holes. Make sure the PCB side of the HDD is facing up.

Fasten the HDD to the bracket, and connect the power connector and data bus connector to the HDD. Then, replace the bracket to DVR.

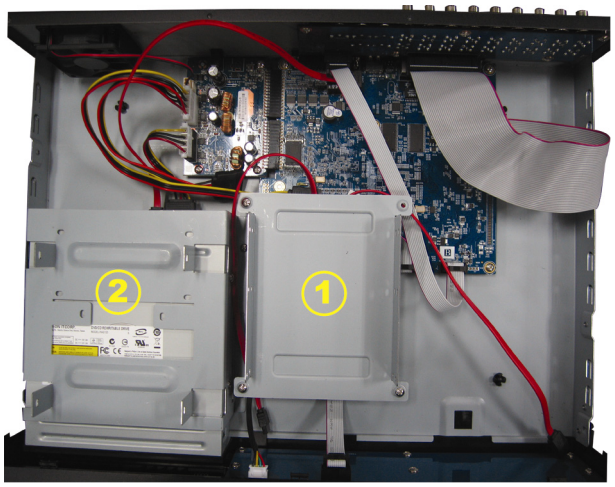

2-2 To install on the second bracket

Connect the power connector and data bus connector to the HDD.

When connecting the power cable, make sure the cable is passed through the power cable of DVD writer if your DVR is equipped with a DVD writer. This is to prevent the HDD power cable from interfering with the fan spinning.

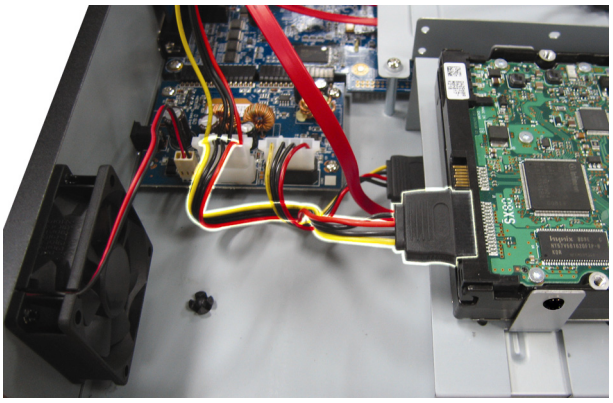

Align the screw holes of the bracket with the HDD's screw holes. Make sure the PCB side of the HDD is facing up. Then, fasten the HDD to the bracket.

Step3: Close the upper cover of the DVR, and fasten all the screws you loosened in Step1.

- **For 4CH Model**

Step1: Loose the screws on the upper cover and remove it from the DVR. Find the hard disk bracket located on the DVR base.

Step2: Get a compatible hard disk, and connect it to the power connector and data bus connector.

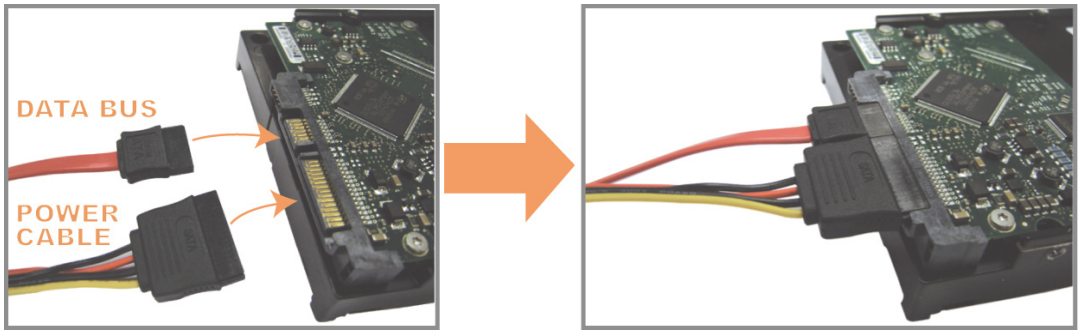

Step3: Make sure the PCB side is facing up, and place the hard disk between the hard disk bracket on the DVR base as shown below.

Make sure the other side of the hard disk is contacted with the DVR base for heat conduction.

Step4: Align the screw hole on the each bracket with the screw hole on the each side of the hard disk as shown below, and fix the hard disk to the bracket with a hard disk screw supplied.

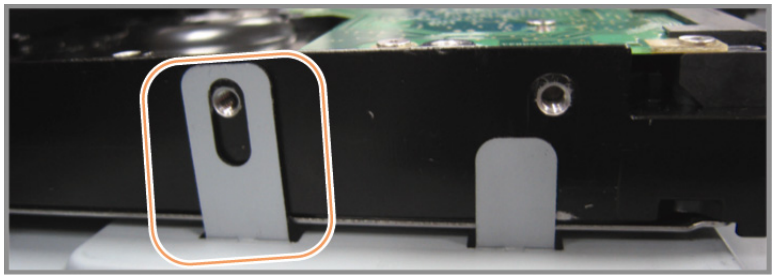

Step5: Close the upper cover of the DVR, and fasten all the screws you loosened in Step1.

2.2 Camera Connection

The cameras must be connected and power-supplied before the DVR is powered on. Connect the camera with the indicated power supply. Then, connect the camera video output to the DVR video input port with a coaxial cable or RCA cable with BNC connectors.

Note: For detailed DVR video input ports, please refer to "1.3 Rear Panel" at page 2.

2.2.1 Normal Camera Connection

Note: For detailed camera installation and connection, please refer to its own user manual.

1) Connecting to DVR video input

   Connect the camera video output to the DVR video input port with a coaxial cable or RCA line with BNC connector.

2) Connecting to DVR audio input (Optional)

   Connect the camera audio output to the DVR audio input port with a coaxial cable or RCA cable with BNC connectors.

3) Connecting to power

   Connect the camera with indicated power supply and make sure it's power-supplied.

2.2.2 PTZ Camera Connection

The following description is taking our brand's PTZ camera as an example.

For DVR setting to control the PTZ camera, please refer to "5.6 PTZ Camera Setting" at page 28. For detailed PTZ camera control and operation, please refer to its own user manual.

RJ11 cable
RS485-A: **Red wire**
RS485-B: **Green wire**
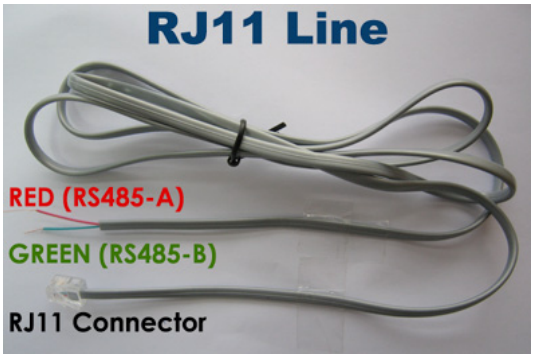
The RJ11 cable is not supplied in the sales package.

STEP 1: Get a RJ11 cable with the proper length to your connection.

Different RJ11 connector may have different wire layout, so the connection might be different. If you cannot control the DVR after connection, please reverse the RJ11 cable connection with the DVR.

STEP 2: Remove one end of the insulating coating of the RJ11 cable.

Remove one end of the insulating coating of the RJ11 cable to find the RS485-A and the RS485-B wires, and remove the insulating coating to reveal the naked wires for further connection.

STEP 3: Twist the RS485-A and RS485-B wires of the RJ11 cable and the speed dome camera together.

Twist the RS485-A (red) and RS485-B (green) wires of the RJ11 cable to the RS485-A (brown) and RS485-B (orange) wires of the speed dome camera. To protect the naked wires, use the insulation tape to cover on the twisted wires.

STEP 4: Connect the other end of the RJ11 cable to DVR.

Solder the RS485-A (red) and RS485-B (green) wires of the RJ11 cable to the corresponding pins on the solder side of the optional D-Sub connector.

For DVR PIN configuration, please refer to "APPENDIX 6 PIN CONFIGURATION" at page 72. For connection details, please check with your installer.

STEP 5: Set the speed dome camera at the DVR side.

When the DVR is powered on, go to “ADVANCED CONFIG” → “DEVICES” to set the speed dome camera.

a) Select the device to “PTZ”.

b) Set the ID to the value the same as the one set in the speed dome camera. The default ID of the camera is 000.

c) Select the protocol to “NORMAL”.

d) Set the baud rate to the value the same as the one set in the speed dome camera. The default baud rate of the camera is 2400.

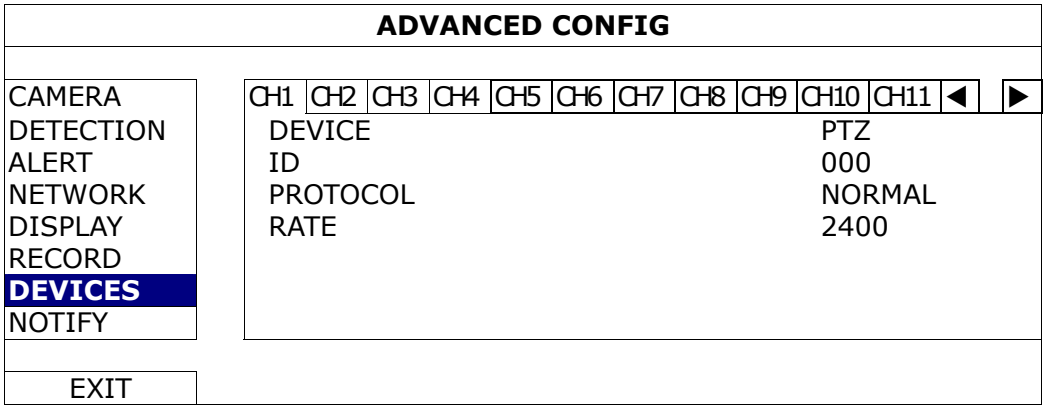

2.3 External Device Connection

This device supports external device connection with RS485 and alarm I/O ports, allowing users to connect control devices such as a PTZ camera or keyboard controller, or connect alarm devices such as a magnetic contact or buzzer.

Check the user manual of your external device to know which pin(s) should be used, and connect it to the corresponding pins on the DVR rear panel.

Note: For more details about alarm I/O pin configurations, please refer to “APPENDIX 6 PIN CONFIGURATION” at page 72.

Certain alarm-in pins also support sending instant event notifications to your mobile devices, such as iPhone, iPad and Android mobile devices, for an alarm event (Push Video). For details, please refer to “5.1 Push Video Configuration” at page 19.

2.4 DVR Power On

This device should be operated only with the type of power source indicated on the manufacturer's label. Connect the indicated AC power cord to the power adapter, and plug into an electrical outlet. Then, move the power switch to "**I**" to power on the DVR.

Note: Before the DVR is powered on, make sure the cameras are connected and power-supplied for the detection of the camera video system to be correct, and check the monitor (either LCD or CRT monitor) is connected to the DVR before the DVR is powered on for correct video output detection.

Note: To ensure that your DVR works constantly and properly, it's recommended to use an UPS, Uninterruptible Power Supply (Optional), for continuously operation.

2.5 Date and Time Setting

Before operating your DVR, please set the date and time on your DVR **FIRST**.

Note: Please DO NOT change the date or time of your DVR after the recording function is activated. Otherwise, the recorded data will be disordered and you will not be able to find the recorded file to backup by time search. If users change the date or time accidentally when the recording function is activated, it's recommended to clear all HDD data, and start recording again.

Note: For the first time to use the DVR, please power it on for at least 48 hours continuously after the date & time is set correctly. It helps to prevent DVR time from resetting after the disconnecting of DVR power. If the DVR time resets after the disconnecting of DVR power, for example, caused by a power outage, the battery might run out and please replace the battery as described in "APPENDIX 5 DVR BATTERY REPLACEMENT" at page 71.

Right-click to enter the DVR password with the password keypad. The default administrator password is 0000. The status will be changed from (key lock) to (administrator). Then, right-click to show the main menu, and select "QUICK START" → "TIME SETUP" to set the date & time.

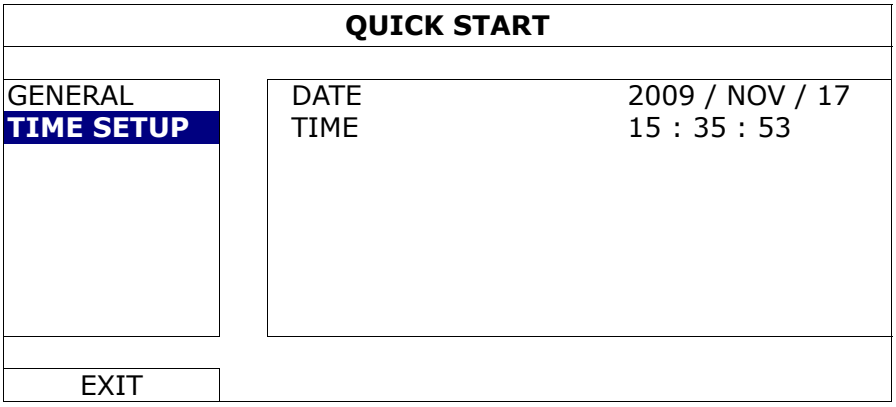

2.6 Clear Hard Disk

It's recommended to clear all data in the hard disk for the first time to user this DVR to ensure the recorded data are not mixed with other data previously saved in the same hard disk.

Right-click to show the main menu, and select "SYSTEM" → "SYSTEM INFO" → "CLEAR HDD". The DVR will reboot when HDD data are cleared.

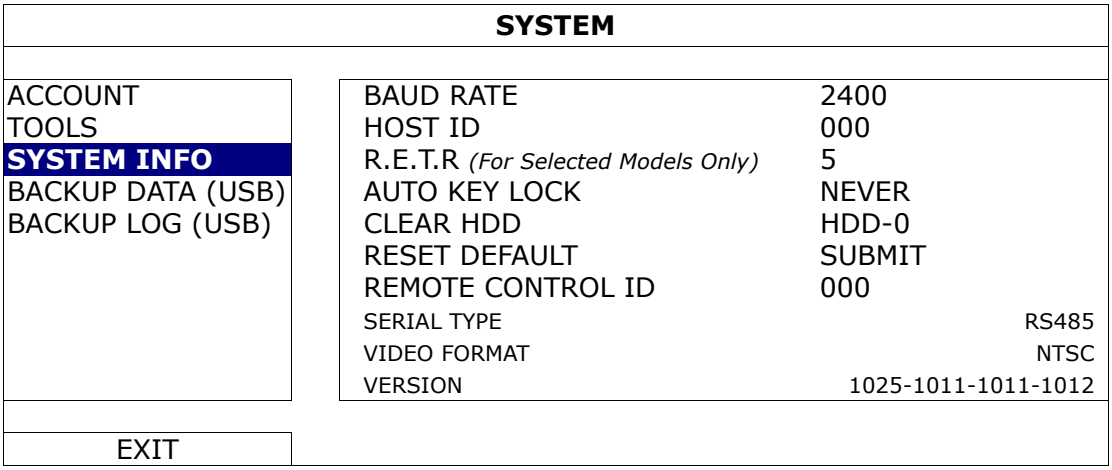

2.7 Password Setting

Right-click to show the main menu, and select "SYSTEM" → "TOOLS" to change the DVR password.

There are two user levels: ADMIN & OPERATOR. For details, please refer to "4.4 User Level Switch" at page 17.

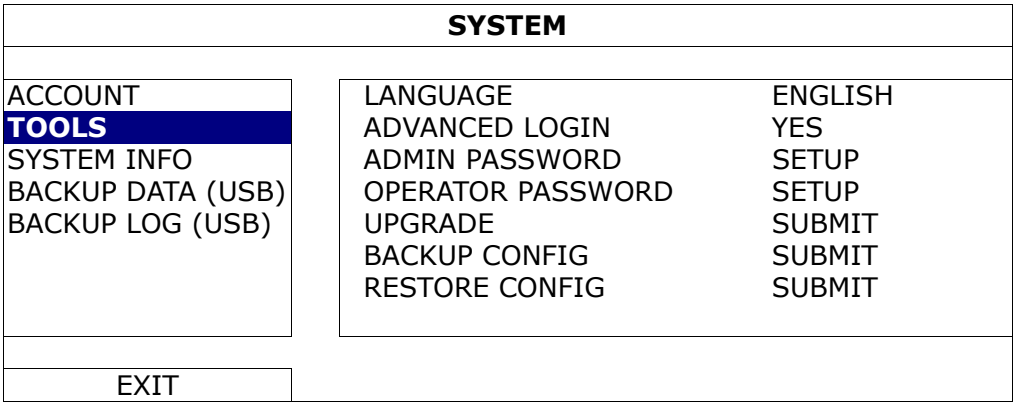
SYSTEM
ACCOUNT
TOOLS
SYSTEM INFO
BACKUP DATA (USB)
BACKUP LOG (USB)
EXIT
LANGUAGE
ENGLISH
ADVANCED LOGIN
YES
ADMIN PASSWORD
SETUP
OPERATOR PASSWORD
SETUP
UPGRADE
SUBMIT
BACKUP CONFIG
SUBMIT
RESTORE CONFIG
SUBMIT

3. GUI DISPLAY WITH USB MOUSE CONTROL

3.1 Connect USB Mouse

Connect your USB mouse to one of the USB ports on the DVR front panel, and check if there's a mouse icon ( ) on the screen, indicating the USB mouse is detected properly.

Move your mouse to enter the DVR password with the password keypad. The default administrator password is **0000**. The status will be changed from (key lock) to (administrator), and the quick menu bar appears on the left side of the screen.

Note: There are two user levels for DVR access which can be set in the main menu "SYSTEM" → "TOOLS". For details, please refer to "4.4 User Level Switch" at page 17.

Password Input

Quick Menu: Close

3.2 Quick Menu Bar

Move to the arrow mark to extend the quick menu bar and show the five functions as follows:

Quick Menu: Open

CH	Click to show the channel switch panel and select the channel you want. For details, please refer to "3.2.1 Channel Switch" at page 13.
	Click to display the playback control panel, and click to play the latest recorded video clip, or click to enter the search list. For details, please refer to "4.3 Playback" at page 16.
	Switch to the channel you want first, and click to enter the zoom-in mode. In this mode, click and drag the red frame on the bottom left of the screen to move to the place you want to see. To exit this mode, click ☒.

	Click to select the audio channel you want: In the live mode, only the live audio channels can be selected. In the playback mode, live and playback audio channels can be selected.
	Click to enter the PTZ mode and show the PTZ camera control panel. For details, please refer to “3.2.2 PTZ Control Panel” at page 13.
	Click to show the power off panel to either halt or reboot the system.

3.2.1 Channel Switch

Click CH on the quick menu bar to display the panel as follows:

Note: The buttons available depend on the model you have.

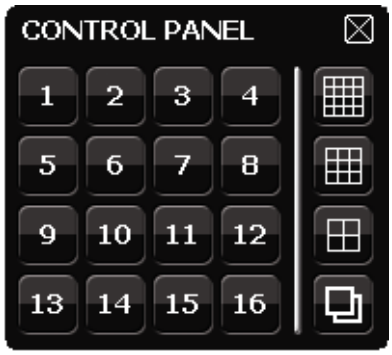

1~16	Video Channel Number	Click to switch to the channel you want in full screen.
	Sequence Display	Click to display each channel in full screen one by one starting from CH1. When the last channel is displayed, it will repeat from CH1 again. When this function is on, will be shown on the status bar.
	Quad Display	Press to show the 4-channel display mode.
	9-Cut Display	Press to show the 9-channel display mode.
	16-Cut Display	Press to show the 16-channel display mode.

3.2.2 PTZ Control Panel

Note: In the PTZ control mode, hot point is supported to move the camera view to the specified point after a click.

Click on the quick menu bar to display the panel as follows:

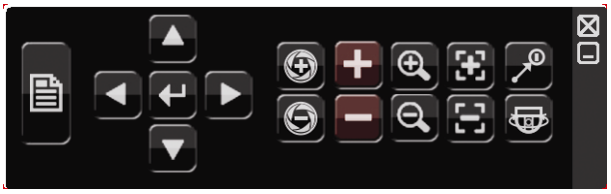

	Camera Menu	Click to enter the camera main menu. For details about each camera menu, please refer to its own user manual.
	Enter	Click to confirm your selection / enter the menu.
/ / /	Up / Down / Left / Right	Click to move your selection up / down / left / right, or change settings.
/	Iris + / Iris -	This two buttons are designed for the PTZ camera which uses Pelco-D to control. To know the actions after clicking Iris + and Iris -, please refer to the camera's user manual.
/	Zoom in / out max	Click to zoom in on the image to the largest / zoom out on the image to its original size.
/	Zoom in / out	Click to zoom in / out the image.
/	Focus near / far	Click to adjust the focus of the image.
	Auto mode	Click to activate the auto function. Before using it, you need to assign a specific function that will be enabled when "" is clicked. For details, please refer to the user manual of the PTZ camera.
	Preset point	Click to enter the PTZ preset point you want to see.

3.3 Main Menu

Right-click anywhere on the screen to show the main menu as follows, and right-click again to exit.

For details about the menu structure, please refer to "APPENDIX 4 MAIN MENU STRUCTURE" at page 69.

Main Menu

	QUICK START	Click to set the status display, image settings, and date & time.
	DATE SETUP	Click to set the date display and daylight saving.
	SYSTEM	Click to set the system configurations.
	EVENT INFORMATION	Click to enter the event search menu.
	ADVANCED CONFIG	Click to set CAMERA, DETECTION, ALERT, NETWORK, DISPLAY, RECORD, DEVICES & NOTIFY.
	SCHEDULE SETTING	Click to set record timer, detection timer & alarm timer.

4. BASIC OPERATION

4.1 Live Page

Icon	Function	Icon	Function	Icon	Function
	Live audio channel (1~4)		Playback audio channel (1~4)		Audio channel off
	Digital zoom on		Digital zoom off		Timer recording
	Network disconnected		Internet connected		LAN connected
	USB mouse connected		USB flash drive / device connected		No USB device connected
	Key lock		PTZ mode on		HDD overwrite
	Administrator		Operator		Sequence
	Motion		Recording		Alarm
	Record mode: Frame		Record mode: Field		Record mode: CIF

4.2 Record Icon

1) Manual Recording

By defaults, manual recording is on ( ) when the DVR is powered on and a HDD is installed.

2) Event Recording

When the motion detection or alarm is on, the motion icon ( ) or alarm icon ( ) shows on the screen for any motion or alarm event.

3) Timer Recording

When timer recording is on, you will see " " on the screen.

4) HDD Overwritten

Be defaults, the HDD overwritten function is set to ON, and " " will be shown on the screen.

4.3 Playback

Click " " on the quick menu bar to display the playback control panel, and click to play the latest recorded video clip, or click to enter the search list.

Note: There must be at least 8192 images of recorded data for playback to work properly. If not, the device will stop playback. For example, if the IPS is set to 30, the recording time should be at least 273 seconds (8192 images / 30 IPS) for the playback to work properly.

Note: During playback, the image size of the recording (FRAME, FIELD or CIF) will be shown on the screen.

4.3.1 Playback Control

	Fast Forward	Increase the speed for fast forward. Click once to get 4X speed forward and click twice to get 8X speed, etc., and the maximum speed is 32X.
	Fast Rewind	Increase the speed for fast rewind. Click once to get 4X speed rewind and click twice to get 8X speed, etc., and the maximum speed is 32X.
/	Play / Pause	Click to play the latest recorded video clip immediately, and click again to pause. In the pause mode, click once to get one frame forward, and click to get one frame rewind.
	Stop	Click to stop the video playback.
	Slow Playback	Click once to get 1/4X speed playback, and click twice to get 1/8X speed playback.
/	Previous / Next Hour	Click to jump to the next / previous time interval in an hour, for example, 11:00 ~ 12:00 or 14:00 ~ 15:00, and start playing the earliest event video clip recorded during this whole hour.
	Repeat	Click to set point A and point B in a video clip, and the system will play only the specified range in that clip.
	Backup	Click to open the backup menu for video backup.

4.3.2 Event Search

Click to quickly search the recorded files by event lists: RECORD / MOTION / ALARM / TIME, or select FULL to show all the event logs.

To quickly search the time you want, select “QUICK SEARCH”. Set the time range you want, and select “SUBMIT” to play the recorded video clip during the specified time.

4.3.3 Audio Playback

In the playback mode, click on the quick menu bar as many times as needed to select live or playback audio from audio channel 1~4.

Live audio from audio channel 1~4 (indicated in white).

Playback audio from audio channel 1~4 (indicated in yellow).

Audio channel unselected

Note: For 4CH models, “VGA OUTPUT” appears only when “PRIORITY” is set to “DISPLAY FIRST”. For details, please refer to “4.5 System Sources Reallocation *(For 4CH Models Only)*”.

Note: To make a video backup with audio, make sure the camera which supports the audio function is connected to the video-in channel and audio-in channel. For example, the audio data from audio CH1 will be recorded with the video data from video CH1.

4.4 User Level Switch

In the key lock mode ( ), move your USB mouse to display the password input keypad. There are two user levels for accessing the DVR: Administrator ( ) & Operator ( ).

When the administrator password is entered, will be shown on the status bar of the screen and all operations are allowed. The default administrator password is 0000.

When the operator password is entered, will be shown on the status bar of the screen, and the main menu is **NOT** allowed to access. The operator user level needs to be set in the main menu “SYSTEM” → “TOOLS”.

To switch between these two user levels, click the current user level icon to switch to the key lock mode, and move your mouse to show the password input keypad, and enter the password of the user level you want.

4.5 System Sources Reallocation *(For 4CH Models Only)*

Go to “QUICK START” → “GENERAL”, and select “PRIORITY” to reallocate the system sources to live display and record.

There are two options for this function: RECORD FIRST / DISPLAY FIRST / NETWORK FIRST.

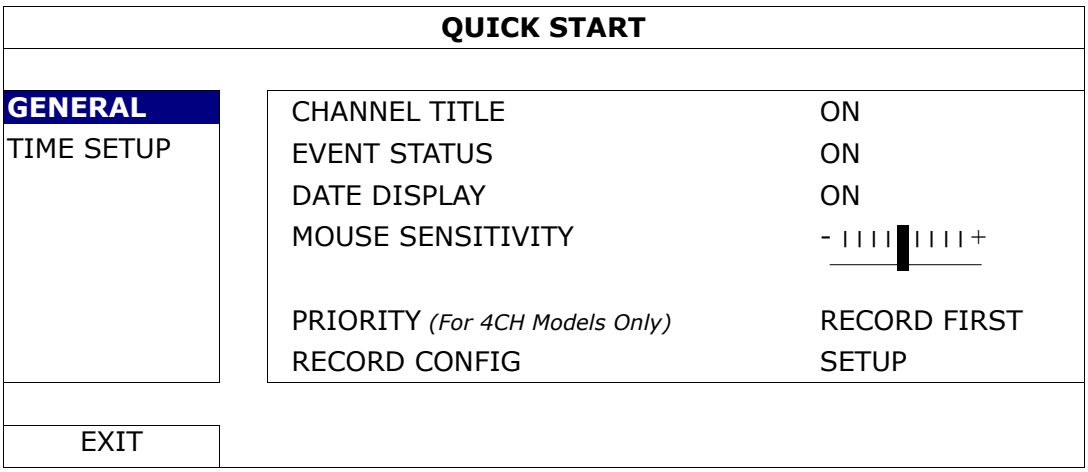

RECORD FIRST: When this option is selected, Full D1 at real-time record on all channels is available, and the VGA output resolution is fixed to 1024 x 768.

DISPLAY FIRST: When this option is selected, three VGA output resolutions will be available to choose), but Full D1 real-time recording on all channels will not be available.

- For models supporting HD video output, the options are AUTO (default) / 1024 x 768 / 1920 x 1080.
- For others, the options are 1024 x 768 / 1280 x 1024 / 1600 x 1200.

NETWORK FIRST: When this option is selected, real-time remote monitoring will be available, but Full D1 real-time recording on all channels will not be available, and the VGA output resolution is fixed to 1024 x 768.

5. FREQUENTLY-USED FUNCTIONS

5.1 Push Video Configuration

This DVR supports sending instant event notifications to your mobile devices, such as iPhone, iPad and Android mobile devices, for an alarm event (Push Video). However, only certain alarm-in pins support this function. For details, please check the instructions below.

5.1.1 PIN Connection

An I/O board might be supplied with this DVR to help you quickly know which pin supports Push Video, or you may refer to the table below, or refer to “APPENDIX 6 PIN CONFIGURATION" at page 72.

- **Models without HD video output**

	PIN	Corresponding video channel
16CH Model	PIN2	CH1
	PIN15	CH2
	PIN3	CH3
	PIN16	CH4
8CH Model	PIN2	CH1
	PIN15	CH2
4CH Model	PIN1	CH1

- **Models with HD video output**

	PIN	Corresponding video channel
With 9-pin I/O block	PIN6	CH1
	PIN7	CH2
	PIN8	CH3
	PIN9	CH4
With 7-pin I/O block	PIN6	CH1
	PIN7	CH2
With 6-pin I/O block	PIN6	CH1

Alarm sensor connection: take 4CH model without HD video output as an example

Connect the alarm sensor, such as magnetic contacts, to the I/O pin which supports Push Video.

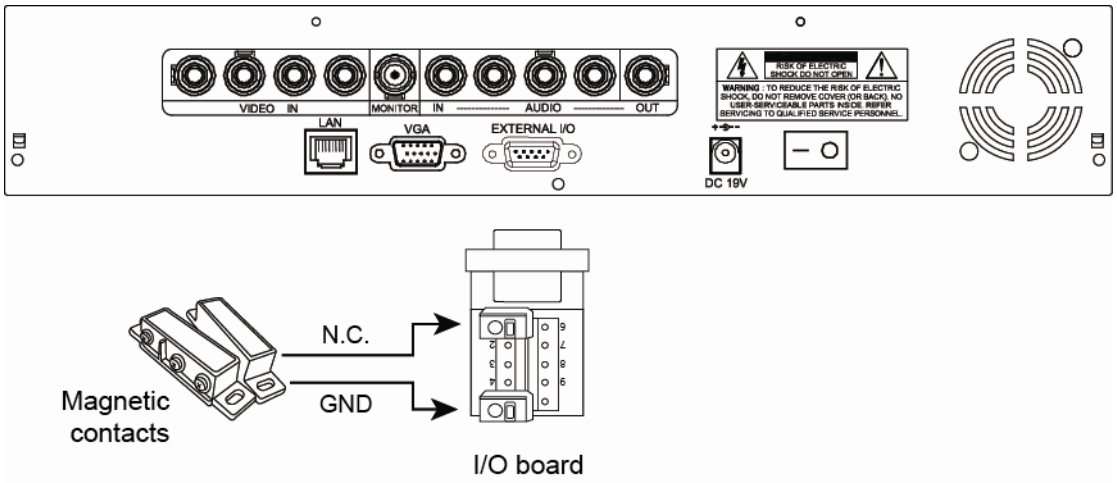

A2.2 Configuration

Before configuring Push Video, make sure:

1. The DVR system is set up as described in “3. CONNECTION AND SETUP”.
2. The DVR is connected to Internet.
3. You’ve installed the app, EagleEyes, on your iPhone, iPad or Android mobile devices. For details, please refer to “APPENDIX 7 MOBILE SURVEILLANCE VIA EAGLEEYES” at page 79.

Step1: Right click to show the main menu.
Go to “ADVANCED CONFIG.” → " NOTIFY” to enable “GUARD” to “ON”, and configure your alarm sensor type (N.C. or N.O.).

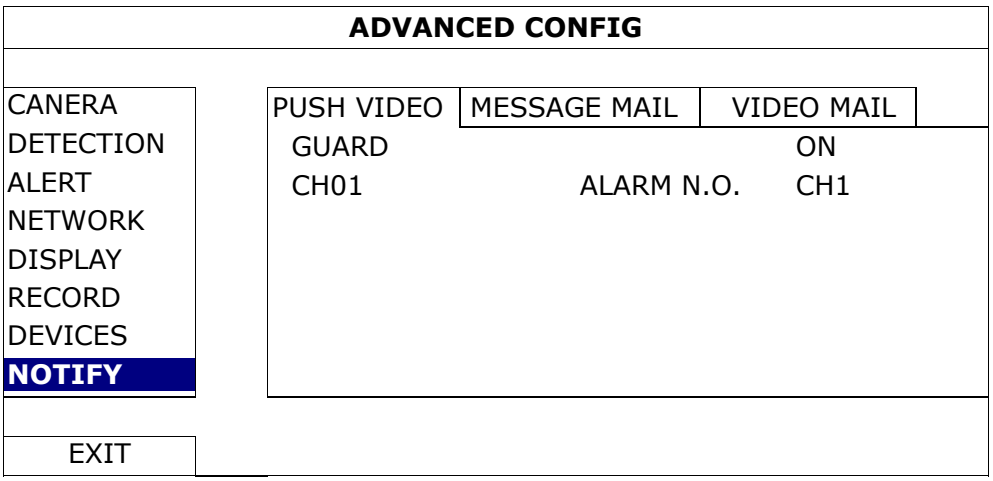

Step2: Open EagleEyes, and add this DVR to the EagleEyes address book.

Note: For more details about EagleEyes operation, please visit www.eagleeyescctv.com.

Step3: Enable Push Video as described below, and try to trigger your sensor to see if you can receive Push Video successfully.

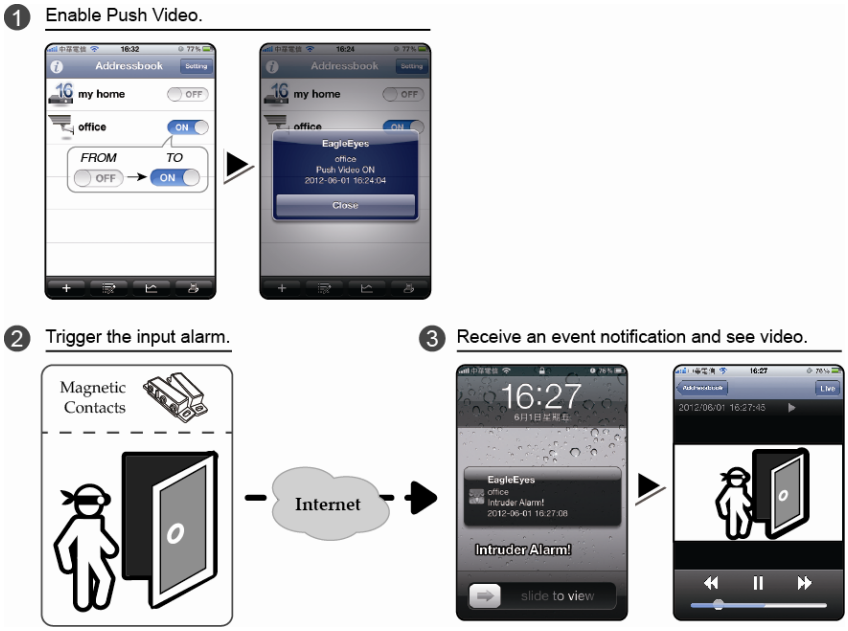

5.2 Quick Search

Press “LIST” on the DVR front panel to enter the time search menu as follows:

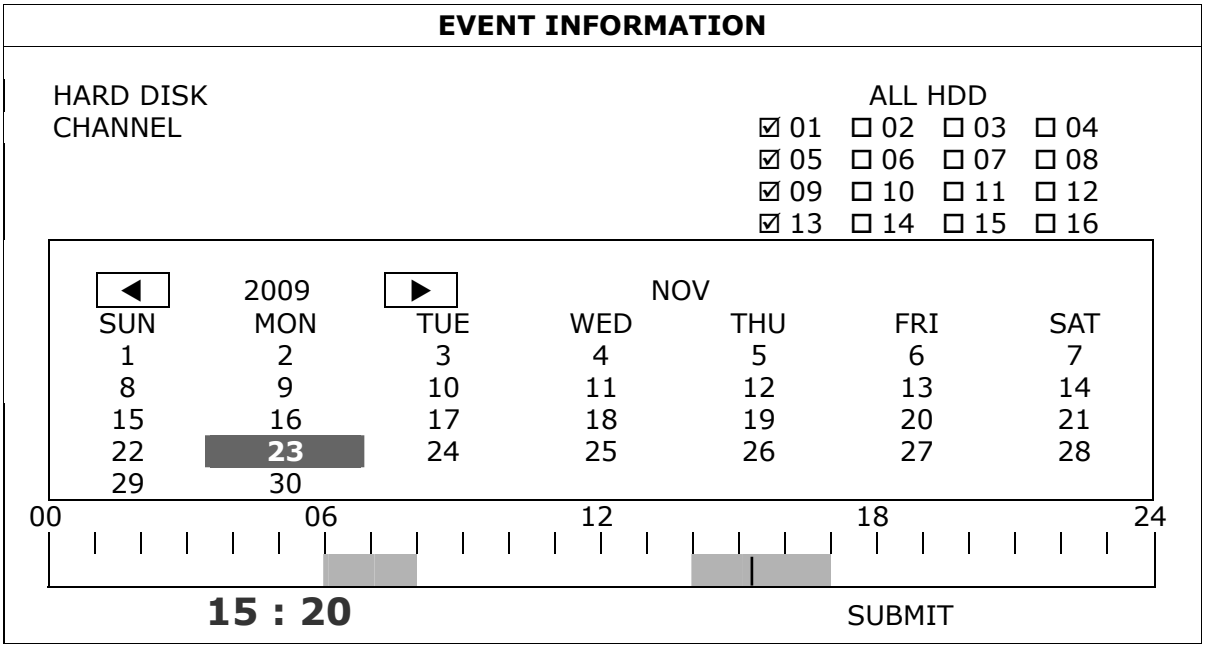

Step1: Select the hard disk and channel including the video data you want to search.

Step2: Select the month including the video data you want to search from the calendar, and the date with recorded data will be highlighted.

Step3: Select the date you want from the calendar, and the time with recorded data will be highlighted from the time scale bar.

Step4: To immediately play the video clip, click “SUBMIT”.

To choose the start time for video playback, move your mouse cursor to the highlighted time, and click to confirm the time when the time display below is the time you want. The video playback is activated right away when you confirm the time.

5.3 Record

5.3.1 Quick record setting

Right-click to display the main menu, and select “QUICK START” → “GENERAL” → “RECORD CONFIG”.

Click “SETUP” to enter the setting page individually for manual record, event record and timer record.

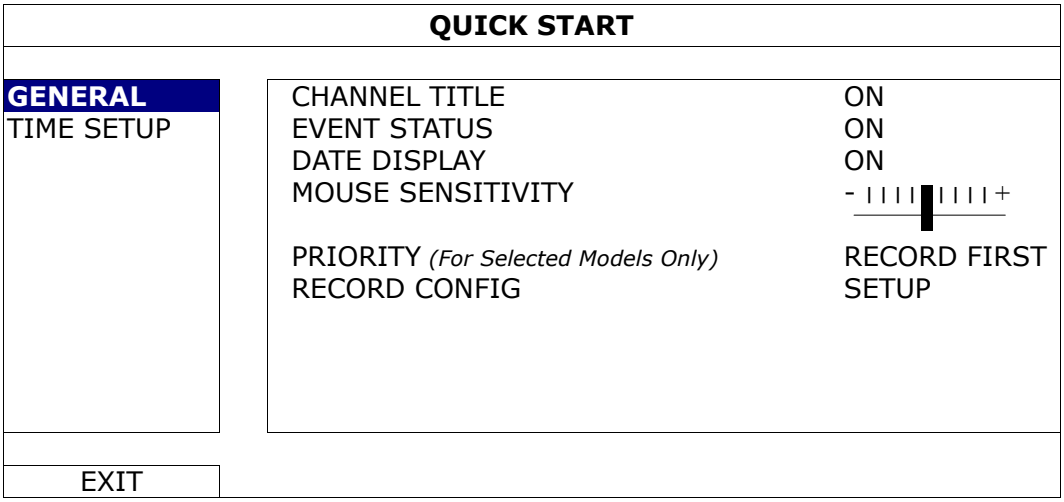

a) Select the record type you want to set.

b) In “CHANNEL”, select “ALL” to apply the changes here to all channels.

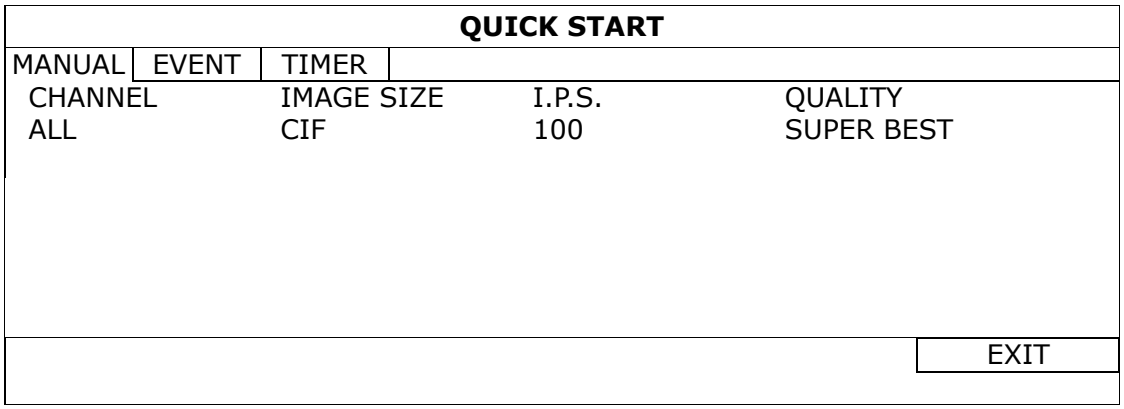

Or, select “BY CHANNEL” to set the image size, image per second & image quality individually for each channel.

QUICK START

MANUAL | EVENT | TIMER

CHANNEL	IMAGE SIZE	I.P.S.	QUALITY
CH1	CIF	25	SUPER BEST
CH2	CIF	25	SUPER BEST
CH3	CIF	6	HIGH
CH4	FIELD	25	SUPER BEST

AVAILABLE IPS: CIF 69 / FIELD 34 / FRAME 17

APPLY EXIT

5.3.2 Detailed record setting

Right-click to display the main menu, and select “ADVANCED CONFIG” → “RECORD”.

Note: Please DO NOT change the date or time of your DVR after the recording function is activated. Otherwise, the recorded data will be disordered and you will not be able to find the recorded file to backup by time search. If users change the date or time accidentally when the recording function is activated, it’s recommended to clear all HDD data, and start recording again.

ADVANCED CONFIG

CAMERA	MANUAL RECORD	ON
DETECTION	EVENT RECORD	ON
ALERT	TIMER RECORD	ON
NETWORK	PRE-ALARM RECORD	ON
DISPLAY	OVERWRITE	ON
RECORD	EVENT RECORD ALL CH.	OFF
DEVICES	KEEP DATA LIMIT (DAYS)	OFF
	RECORD CONFIG	SETUP

EXIT

1) MANUAL RECORD

Set the manual recording function on / off.

2) EVENT RECORD

Set the event recording function on / off.

3) TIMER RECORD

Set the timer recording function on / off.

4) PRE-ALARM RECORD

Select to enable or disable the pre-alarm function (ON / OFF).
When pre-alarm and event recording functions are both activated, the DVR will record 8MB data before an alarm / motion event is triggered.

5) OVERWRITE

Select “ON” to overwrite previous recorded data in your HDD when the HDD is full. When this function is on and the HDD is full, the DVR will clear 8GB data from the oldest for continuous recording without notice.

6) EVENT RECORD ALL CH.

Select to record all channels (ON) or record the channel with an event only (OFF) for any event.

7) KEEP DATA LIMIT (DAYS)

Assign the maximum recording days from 01 to 31 after which all the recorded data will be removed, or select “OFF” to disable this function.

8) RECORD CONFIG

Please refer to “5.3.1 Quick record setting”.

5.4 Schedule Setting

Right-click to display the main menu, and select “SCHEDULE SETTING”.

5.4.1 Record Timer

Click “RECORD”. In “RECORD TIMER”, select “ON” to enable record timer, and select the day and time for this function.

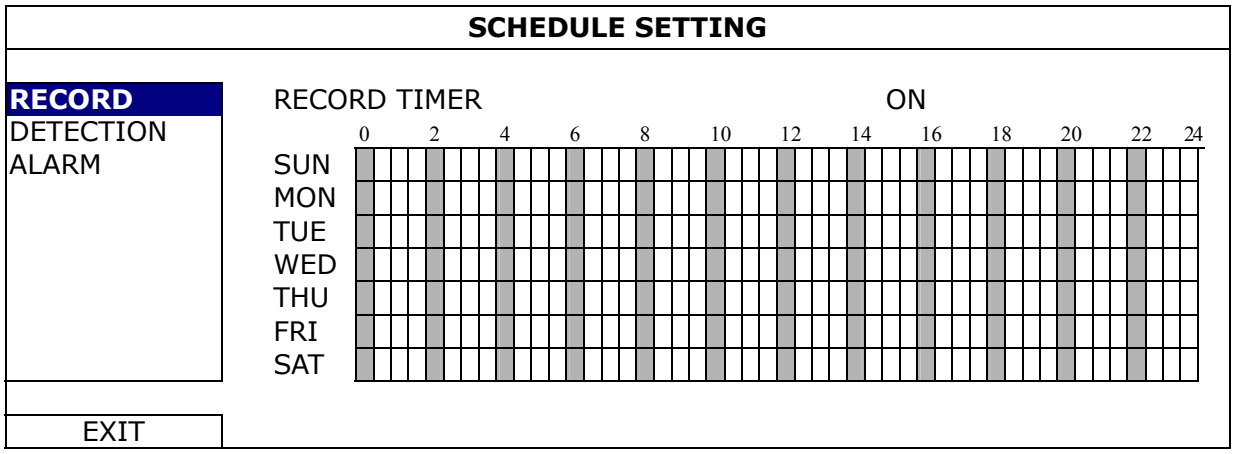

X axis 0 ~ 24 hours. Each time bar is 30 minutes.
Y axis Monday ~ Sunday.

5.4.2 Detection Timer

Click “DETECTION”. In “DETECTION TIMER”, select “ON” to enable record timer, and select the day and time for this function.

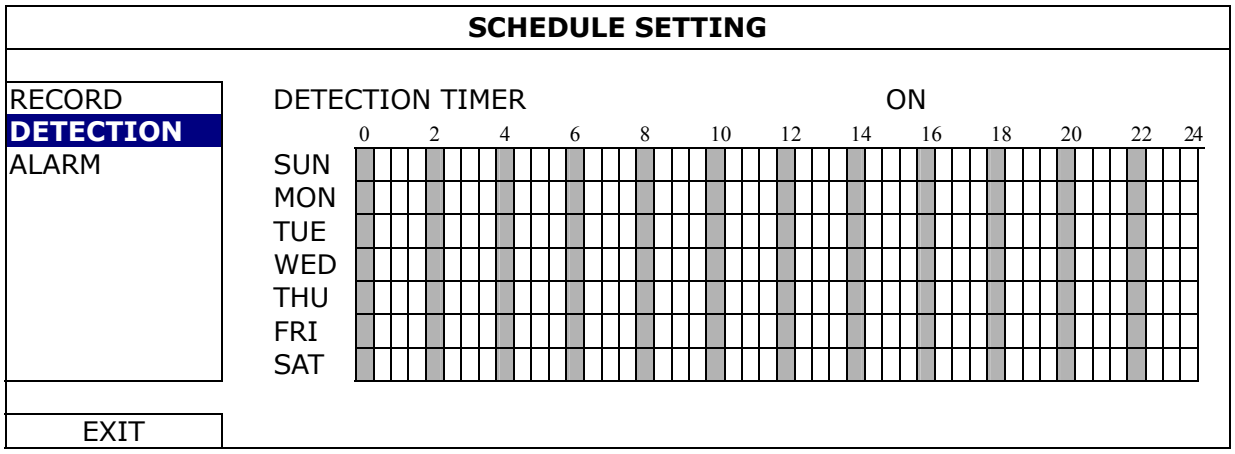

X axis 0 ~ 24 hours. Each time bar is 30 minutes.

Y axis Monday ~ Sunday.

5.4.3 Alarm Timer

Click “ALARM”. In “ALARM TIMER”, select “ON” to enable record timer, and select the day and time for this function.

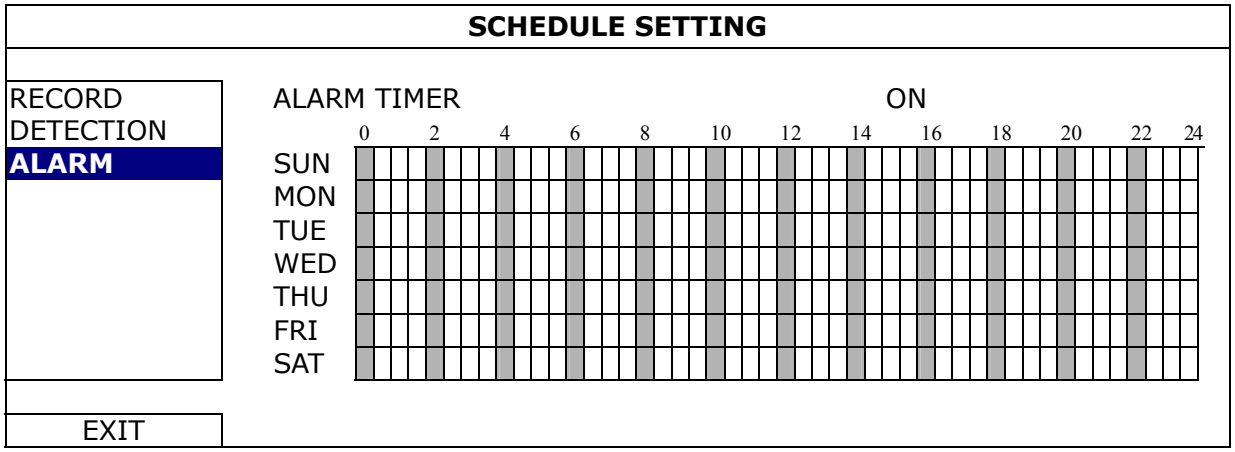

X axis 0 ~ 24 hours. Each time bar is 30 minutes.

Y axis Monday ~ Sunday.

5.5 Detection Setting

Right-click to display the main menu, and select “ADVANCED CONFIG” → “DETECTION”.

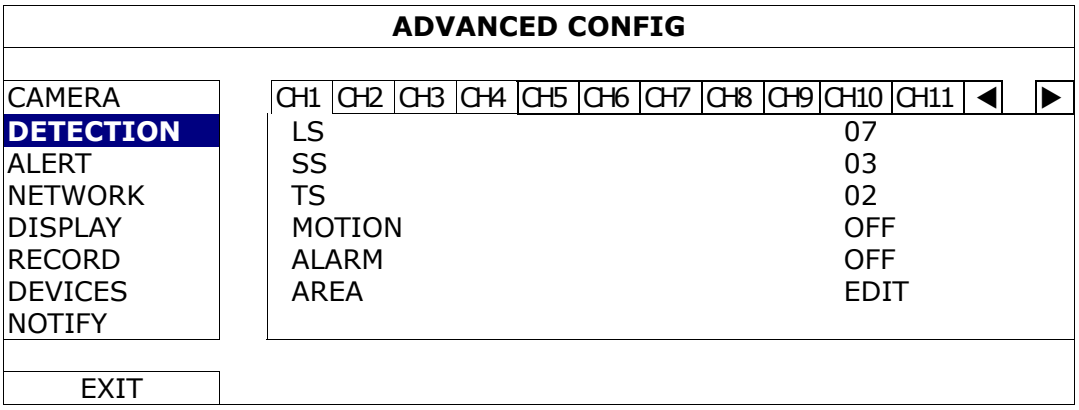

1) LS (Level of Sensitivity)

“LS” is to set the sensitivity of comparing two different images. The smaller the value is, the higher sensitivity for motion detection. The highest sensitivity setting is 00, and the lowest sensitivity setting is 15. The default value is 07.

2) SS (Spatial Sensitivity)

“SS” is to set the sensitivity for detecting the size of one object (the number of the grids) on the screen. The smaller the value is, the higher sensitivity for motion detection.

The highest sensitivity setting is 00, and the lowest sensitivity setting is 15. The default setting is 03.

Note: The default setting of SS is 03, which means once an object is detected more than 3 grids, the system will get triggered. So the value of SS must be less than the number of grids that you set up for the motion detection area.

3) TS (Time of Sensitivity)

“TS” is to set the sensitivity regarding how long one object stays in the detection area and triggers the recording. The smaller the value is, the higher sensitivity for motion detection.

The highest sensitivity setting is 00, and the lowest sensitivity setting is 15. The default setting is 02.

4) MOTION

Select if you want to activate the motion detection function for the selected channel (ON/OFF).

5) ALARM

Select N.C./ N.O depending on your installation need. The default alarm value is OFF.

6) AREA

Click “EDIT” to set the motion detection area.

There are 16 × 12 grids per camera for all channels. Pink blocks represent the area that is not being detected while the transparent blocks are the area under detection.

5.6 PTZ Camera Setting

Right-click to display the main menu, and select “ADVANCED CONFIG” → “DEVICES”.

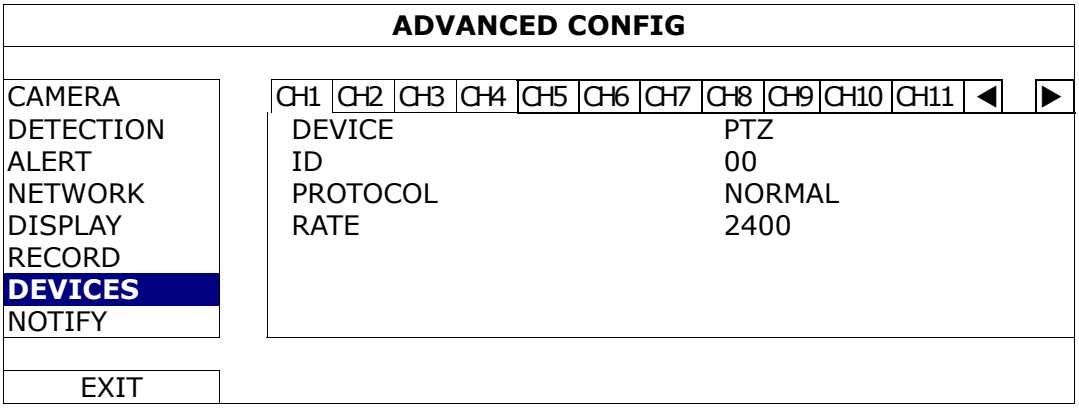

1) DEVICE

For the PTZ camera, select “PTZ”.

2) ID

Click the current value to set the ID number (0 ~ 255) for the connected PTZ camera if necessary.

Make sure the ID setting of the camera is the same as the setting here, or the DVR will not be able to control the device.

Note: To know the default ID of the PTZ camera, please refer to its user manual.

3) PROTOCOL

Select NORMAL (our protocol), P-D (PELCO-D) or P-P (PELCO-P) protocol.

4) RATE

Select the baud rate for the connected PTZ camera (2400 / 4800 / 9600 / 19200 / 57600 / 115200).

Make sure the baud rate setting of the camera is the same as the setting here, or the DVR will not be able to control the device.

Note: To know the default baud rate of the PTZ camera, please refer to its user manual.

5.7 System Setting

5.7.1 Password Setting

Right-click to display the main menu, and select “SYSTEM” → “TOOLS”.

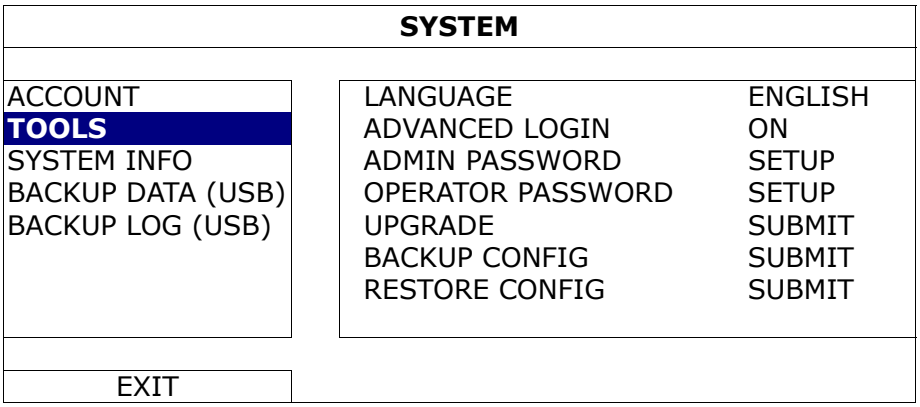

1) ADMIN PASSWORD

Click “SETUP” to change the administrator password. The default administrator password is **0000**.

When you’re prompted to enter the DVR password, enter the administrator password, and will be shown on the status bar of the screen and all operations are allowed.

2) OPERATOR PASSWORD

Click “SETUP” to set or change the operator password. .

When you’re prompted to enter the DVR password, enter the operator password, and will be shown on the status bar of the screen and the main menu is **NOT** allowed to access.

5.7.2 System Upgrade

Note: DVR system upgrade might cause all HDD data cleared when your current system version is too old from the latest version. Therefore, before upgrading the DVR system, check your current firmware version with your installer or distributor, and make video backup if necessary.

Right-click to display the main menu, and select “SYSTEM” → “TOOLS” → “UPGRADE”.

Save the upgrade files obtained from your installer or distributor in a compatible USB flash drive, and insert it into the USB port at the front panel.

Then, click “SUBMIT” to start upgrading.

Note: Before using the USB flash drive, please use your PC to format the USB flash drive to FAT32 format first. For the list of compatible USB flash drives, please refer to "APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST" at page 67.

5.7.3 Backup & Restore Configurations

Right-click to display the main menu, and select "SYSTEM" → "TOOLS" → "BACKUP CONFIG" or "RESTORE CONFIG".

These two functions allows users to keep the current configurations after DVR upgrade, or copy one DVR configurations to another DVR if necessary.

Insert a compatible USB flash drive into the USB port *before upgrading DVR*, and select "SUBMIT" in "BACKUP CONFIG" to copy the current DVR configurations to a file "System.bin" and save to your USB flash drive.

To restore DVR configurations after upgrading DVR, insert the USB flash drive including "System.bin" to the USB port, and select "SUBMIT" in "RESTORE CONFIG".

5.7.4 Video Backup

Right-click to display the main menu, and select "SYSTEM" → "BACKUP DATA (USB)" or "BACKUP DATA (DVD)".

Note: "BACKUP DATA (DVD)" is only available for the model with a DVD writer built-in. Please check the specifications of your DVR model for details.

Insert a compatible USB flash drive to the USB port at the front panel, or press ⏏ to eject the DVD writer and place a DVD-ROM or CD-ROM to it.

Note: Before using the USB flash drive, please use your PC to format the USB flash drive to FAT32 format first. For the list of compatible USB flash drives, please refer to "APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST" at page 67.

Note: For the compatible CD- / DVD-ROM list, please refer to "APPENDIX 8 DVD- / CD-ROM COMPATIBLE LIST" at page 80.

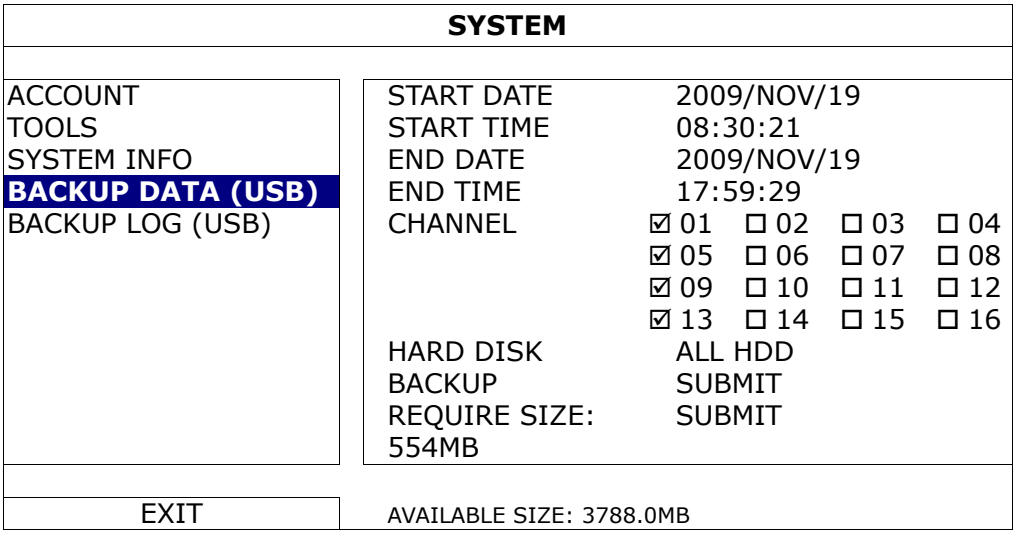

1) START DATE / START TIME
   Select the start date & time.

2) END DATE / TIME
   Select the end date & time.

3) CHANNEL
   Click to select the channel(s).

4) HARD DISK
   Select the hard disk containing the video data you need or “ALL HDD”.

5) BACKUP
   Click “SUBMIT” to start backup.

6) REQUIRE SIZE
   To know the size of the expected backup video before backup, click “SUBMIT” to start calculating.

■ Backup File Playback

During the backup process, a file player installer “PLAYER.EXE” will also be copied into your USB flash drive or disk, and you will see the message “CHECK PLAYER” shown on the screen.

Note: The maximum number of backup files in the CD-ROM or DVD-ROM is 41.

Insert your USB flash drive or place the CD or DVD into the DVD-ROM drive of your PC. Install the file player “PLAYER.EXE”, and double click a backup file to play it directly in your PC and see if the backup is successful.

Note: The supported PC operating systems are Windows 7, Vista, XP & 2000.

5.7.5 Event Log Backup

Right-click to display the main menu, and select “SYSTEM” → “BACKUP LOG (USB)” This function is used to backup the event log.

Insert a compatible USB flash drive to the USB port at the front panel.

Note: Before using the USB flash drive, please use your PC to format the USB flash drive to FAT32 format first. For the list of compatible USB flash drives, please refer to “APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST” at page 67.

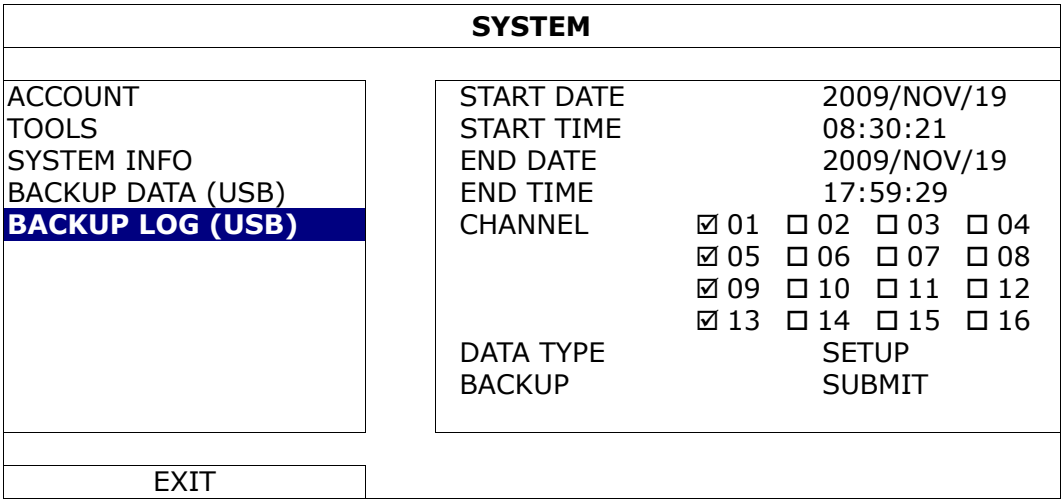

1) START DATE / START TIME

Select the start date & time.

2) END DATE / TIME

Select the end date & time.

3) CHANNEL

Click to select the channel(s).

4) DATA TYPE

Click “SETUP” to select the event type you want: MANUAL / MOTION / ALARM / SYSTEM / TIMER, or select “SELECT ALL” to choose all event types.

5) BACKUP

Click “SUBMIT” to start backup. You’ll see a log file (.csv) in the flash drive.

5.7.6 Clear All HDD Data

Right-click to show the main menu, and select “SYSTEM” → “SYSTEM INFO” → “CLEAR HDD”.

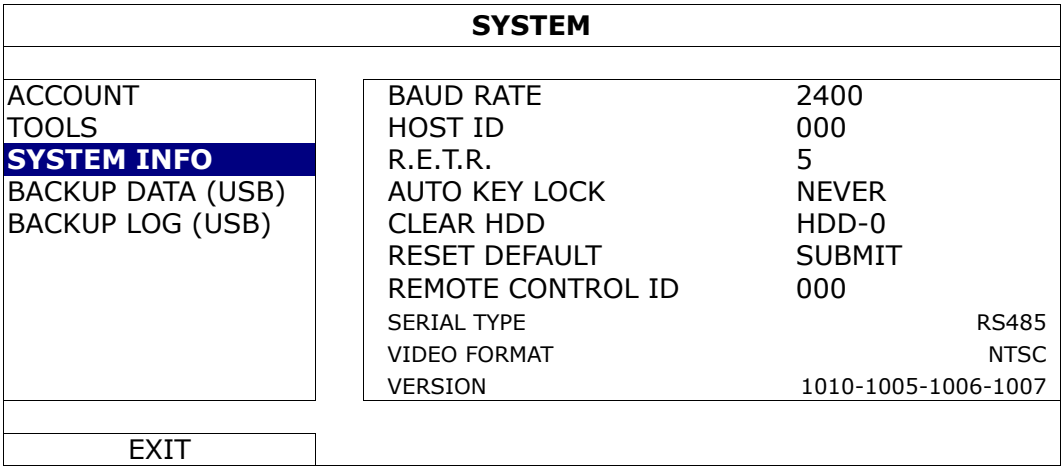

Select the HDD you want to clear, and click “YES” to confirm or “NO” to cancel.

It’s recommended to clear all data in the hard disk when:

- It’s the first time to use this DVR to ensure the recorded data are not mixed with other data previously saved in the same hard disk.
- DVR date and time are changed accidentally when the recording function is activated. Otherwise, the recorded data will be disordered and you will not be able to find the recorded file to backup by time search.

5.8 Network

5.8.1 STATIC

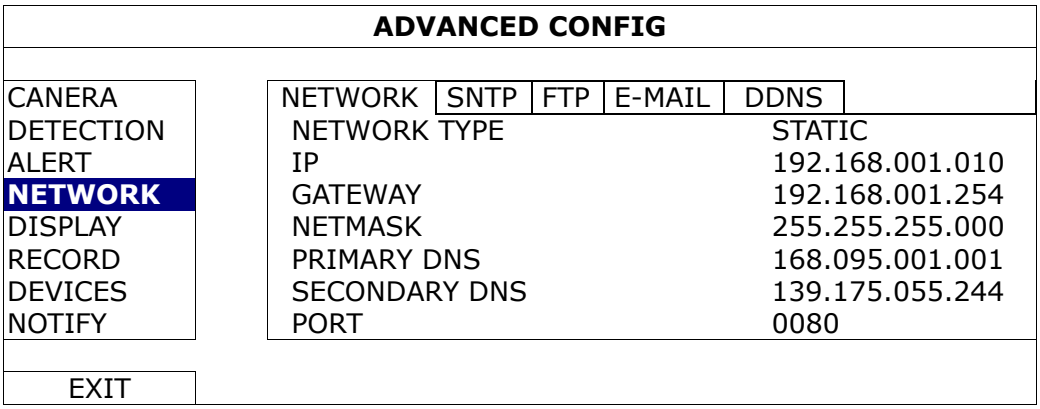

1) NETWORK TYPE

Select the network type as STATIC and set all the information needed in the DVR.

2) NETWORK INFORMATION (IP / GATEWAY / NETMASK)

Key in all the network information obtained from your ISP (Internet Service Provider).

3) DNS (PRIMARY DNS / SECONDARY DNS)

Key in the IP address of the domain name server obtained from your ISP (Internet Service Provider).

4) PORT

The valid number ranges from 1 to 9999. The default value is 80. Typically, the TCP port used by HTTP is 80. However in some cases, it is better to change this port number for added flexibility or security.

5.8.2 PPPOE

Note: When PPPOE configuration is completed, please move to "DDNS" to configure the DDNS service.

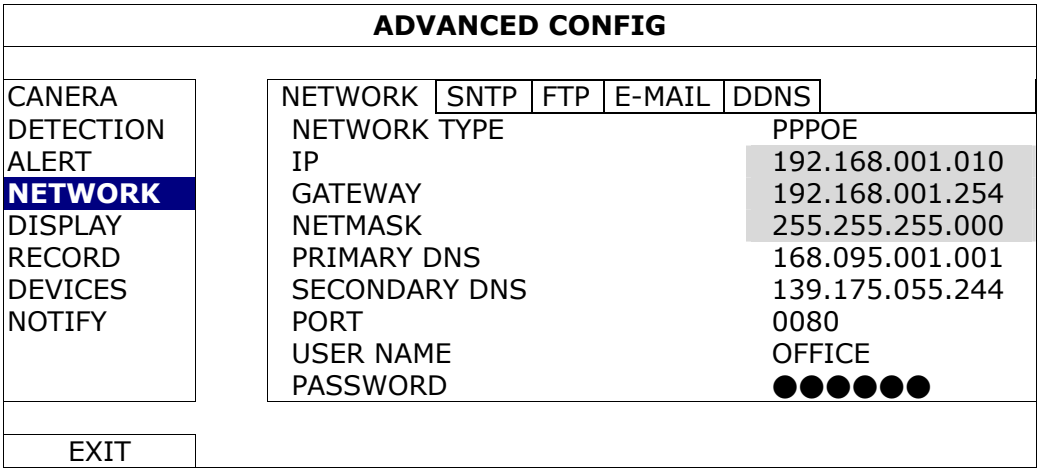

1) NETWORK TYPE

Select the network type as PPPOE and set all the information needed in the DVR.

2) DNS (PRIMARY DNS / SECONDARY DNS)

Key in the IP address of the domain name server obtained from your ISP (Internet Service Provider).

3) PORT

The valid number ranges from 1 to 9999. The default value is 80. Typically, the TCP port used by HTTP is 80. However in some cases, it is better to change this port number for added flexibility or security.

4) USER NAME / PASSWORD

Set "username" and "password" subscribed from your ISP supplier.

5.8.3 DHCP

Note: When DHCP configuration is completed, please move to "DDNS" to configure the DDNS service.

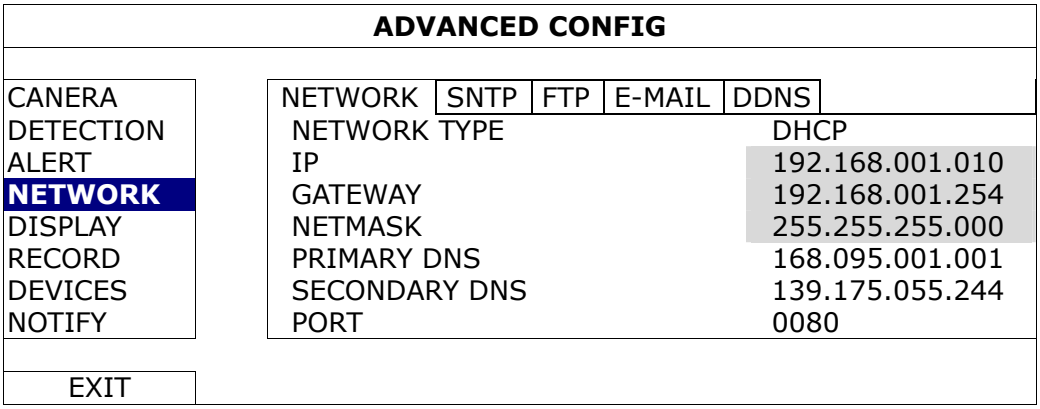

1) NETWORK TYPE

Select the network type as DHCP.

2) DNS (PRIMARY DNS / SECONDARY DNS)

Key in the IP address of the domain name server obtained from your ISP (Internet Service Provider).

3) PORT

The valid number ranges from 1 to 9999. The default value is 80. Typically, the TCP port used by HTTP is 80. However in some cases, it is better to change this port number for added flexibility or security.

5.8.4 DDNS

You need to additionally set DDNS when your network type is PPPOE or DHCP.

We have our own DDNS server for quick DDNS service configuration. You don't need to additionally apply a DDNS service.

- To use our own DDNS server, select "default" in "SYSTEM NAME".
- The default host name is the MAC address of the DVR.
  Then, note down the whole address under "CURRENT HOST ADDRESS", such as *MAC000E5318B3F0@ddns.dvrtw.com.tw*. This is the default IP address used to access your DVR remotely.

Note: Please at least use the default address to access your DVR remotely once. This is to ensure our DDNS server has your DVR registered. Then, you may change the host name to a more meaningful name to memorize later here.

Note: If you want to additionally apply a DDNS service instead of using ours, please refer to www.surveillance-download.com/user/CMS.pdf and check "Appendix 2" for details.

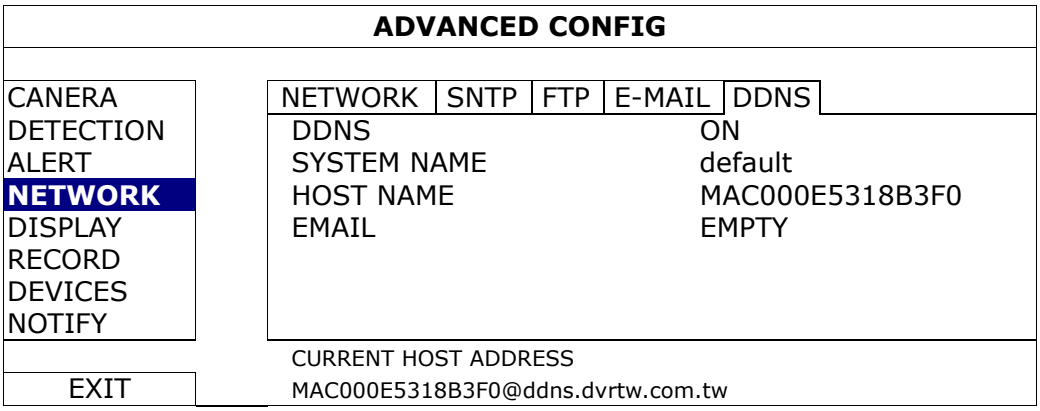

5.9 Event Notifications

It's available to set event notifications to FTP / E-Mail from this DVR.

Note: This function requires Internet access. Please make sure your Internet access is available for this function to work properly.

5.9.1 FTP

When this function is enabled and an event occurs, a html file including a link will be sent to the specified FTP site. Click the link to access to this DVR and check the event recording.

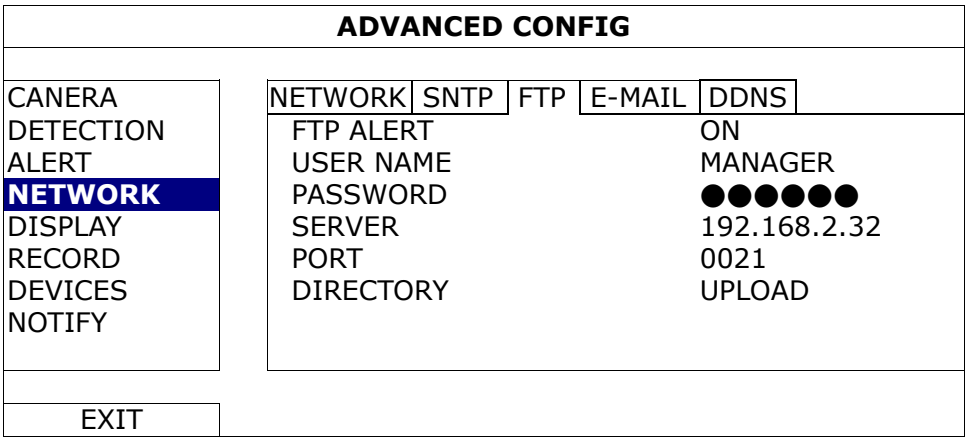

5.9.2 E-MAIL

When this function is enabled and an event occurs, a html file including a link will be sent to the specified E-mail address. Click the link to access to this DVR and check the event recording.

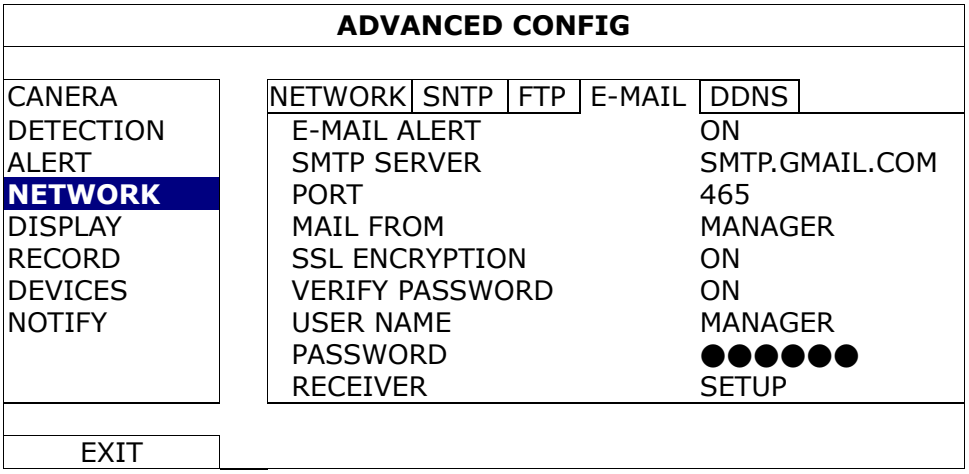

1) E-MAIL ALERT

Select “ON” to enable this function, or “OFF” to disable this function.

2) SMTP SERVER

Enter the SMTP server address provided from your e-mail system supplier.

3) PORT

Enter the port number provided from your e-mail system supplier. If this column is left blank, the e-mail server will use port 25 to send e-mails.

4) MAIL FROM

Enter the sender’s name.

5) SSL ENCRYPTION

Select “ON” if your e-mail server is using SSL encryption to protect your e-mail content from unauthorized access.

6) VERIFY PASSWORD

Some mail servers are required to verify the password. Please enter the “user name” and “password”.

7) USER NAME / PASSWORD

Enter the “user name” and “password” when “VERIFY PASSWORD” is set to “ON”.

8) RECEIVER

Select “SETUP” to add up to 15 e-mail addresses of the assigned recipients.

5.10 VGA Output Resolution Support

Users are allowed to change the resolution depending on their display monitor.

Right-click to display the main menu, and select “ADVANCED CONFIG” → “DISPLAY”.

ADVANCED CONFIG		
CAMERA	DE-INTERLACE *(For Selected Models Only)*	OFF
DETECTION	FULL SCREEN DURATION	03
ALERT	QUAD SCREEN DURATION *(For Selected Models Only)*	03
NETWORK	DWELL SCREEN DURATION *(For Selected Models Only)*	03
DISPLAY	DISPLAY COVERT	ON
RECORD	HDD DISPLAY MODE	HDD SIZE
DEVICES	VIDEO OUTPUT *(For Selected Models Only)*	BOTH
NOTIFY	ALPHA BLENDING	200
	VGA OUTPUT	1024 x 768
	VGA DEINTERLACE *(For Selected Models Only)*	ON
	COMPOSITE DEINTERLACE *(For Selected Models Only)*	ON
EXIT		

Move to “VGA OUTPUT”, and select the VGA resolution you want.

For models supporting HD video output:

- AUTO (default)
- 1024 x 768
- 1920 x 1080

For other models:

- 1024 x 768 (default)
- 1280 x 1024
- 1600 x 1200

Note: For the 4CH models, “VGA OUTPUT” appears only when “PRIORITY” is set to “DISPLAY FIRST”. For details, please refer to “4.5 System Sources Reallocation *(For 4CH Models Only)*” at page 18.

Note: To have the best image quality on your LCD monitor, make sure (1) the selected DVR VGA output resolution is supported by your monitor, and (2) the VGA output settings on both the LCD monitor and DVR are consistent. If the image is not positioned or scaled properly, please go to your monitor’s menu for adjustment. For details, please refer to the user manual of your LCD monitor.

5.11 System Sources Reallocation *(For 4CH Models Only)*

This function is used to reallocate the system sources to live display & record.

There are two options for this function: RECORD FIRST / DISPLAY FIRST / NETWORK FIRST.

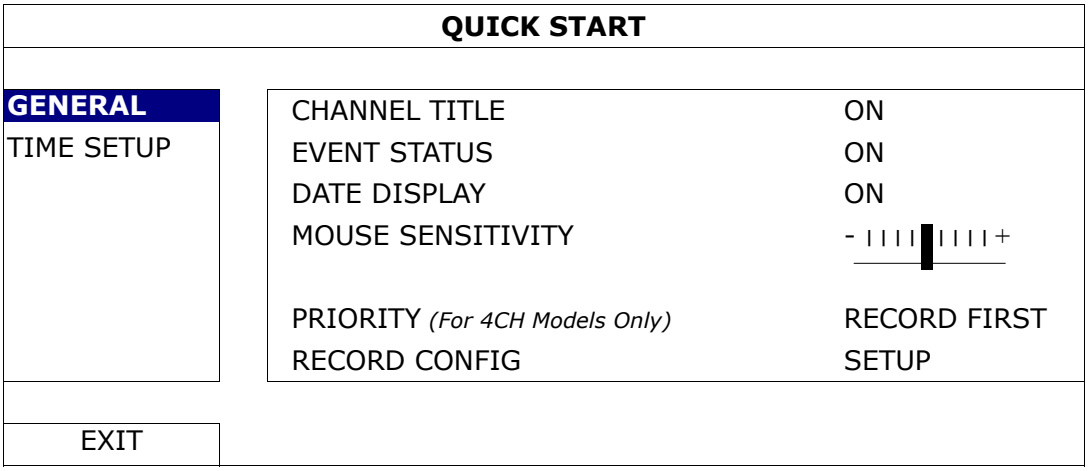

RECORD FIRST: When this option is selected, Full D1 at real-time record on all channels is available, and the VGA output resolution is fixed to 1024 x 768.

DISPLAY FIRST: When this option is selected, three VGA output resolutions will be available to choose, but Full D1 real-time recording on all channels will not be available.

- For models supporting HD video output, the options are AUTO (default) / 1024 x 768 / 1920 x 1080.
- For others, the options are 1024 x 768 (default) / 1280 x 1024 / 1600 x 1200.

NETWORK FIRST: When this option is selected, real-time remote monitoring will be available, but Full D1 real-time recording on all channels will not be available, and the VGA output resolution is fixed to 1024 x 768.

6. REMOTE OPERATION

You can also control the DVR remotely via the supplied licensed software “Video Viewer”, web browser, and your smart phones.

Note: For more details about mobile surveillance via your smart phones, please visit our official website www.eagleeyescctv.com, or download the instructions of EagleEyes installation and configuration from www.surveillance-download.com/user/eagleeyes_quick.pdf.

6.1 Supplied Licensed Software

The sections below describe frequently-used functions of the Video Viewer. For details about this software and network settings, please download its extended user manual from the following link:
http://www.surveillance-download.com/user/CMS.pdf

6.1.1 Installation & Network Connection

1) Install the software

Step1: Place the supplied CD into your CD-ROM or DVD-ROM drive. The program will be automatically run.

Step2: Click “Download The Latest Version” under “Licensed Software AP” to download the latest version of Video Viewer from the Internet.

Step3: Follow the on-screen instructions to finish the installation. When the installation is completed, a shortcut icon “ ” will be placed on your PC desktop.

2) Network Connection

- Local Connection (via LAN)

  LAN is used when it’s the first time to remotely access the DVR and you need to configure the network setting of your DVR based on your network type in advance.

a) Connect the DVR to your PC via a RJ45 network cable. The default DVR values are as follows:

Item	Default Value
IP address	192.168.1.10
User name	admin
Password	admin
Port	80

b) Set the PC's IP address as "192.168.1.XXX" (1~255, except 10) in order to make the PC and DVR under the same domain.

c) Double-click " " icon on your PC desktop to enter the control panel. By defaults, the "Address Book" panel will be displayed on the right side of the control panel.

d) Click " " → " " to key in the default IP address, user name, password, and port number of the DVR you intend to connect.

OR

Click " " → " " to search the available IP address(es) of other DVR(s) under the same domain as your PC's IP address. The found address(es) will be listed, and can be added into the address book by clicking " ".

e) Double-click the IP address you just added into the address book to log in.

➢ Remote Connection (via Internet)

When the network configuration of your DVR is completed, you can access your DVR remotely via Internet.

a) Double-click " " icon on your PC desktop to enter the control panel. By defaults, the "Address Book" panel will be displayed on the right side of the control panel.

b) Click " " → " " to key in the IP address, user name, password, and port number of the DVR you intend to connect.

OR

Click " " → " " to search the available IP address(es) of other DVR(s) under the same domain as your PC's IP address. The found address(es) will be listed, and can be added into the address book by clicking " ".

c) Double-click the IP address you just added into the address book to log in.

6.1.2 Control Panel Overview

Two control panels are available and can be switched depending on your use habit.

Simplified Version (Default)

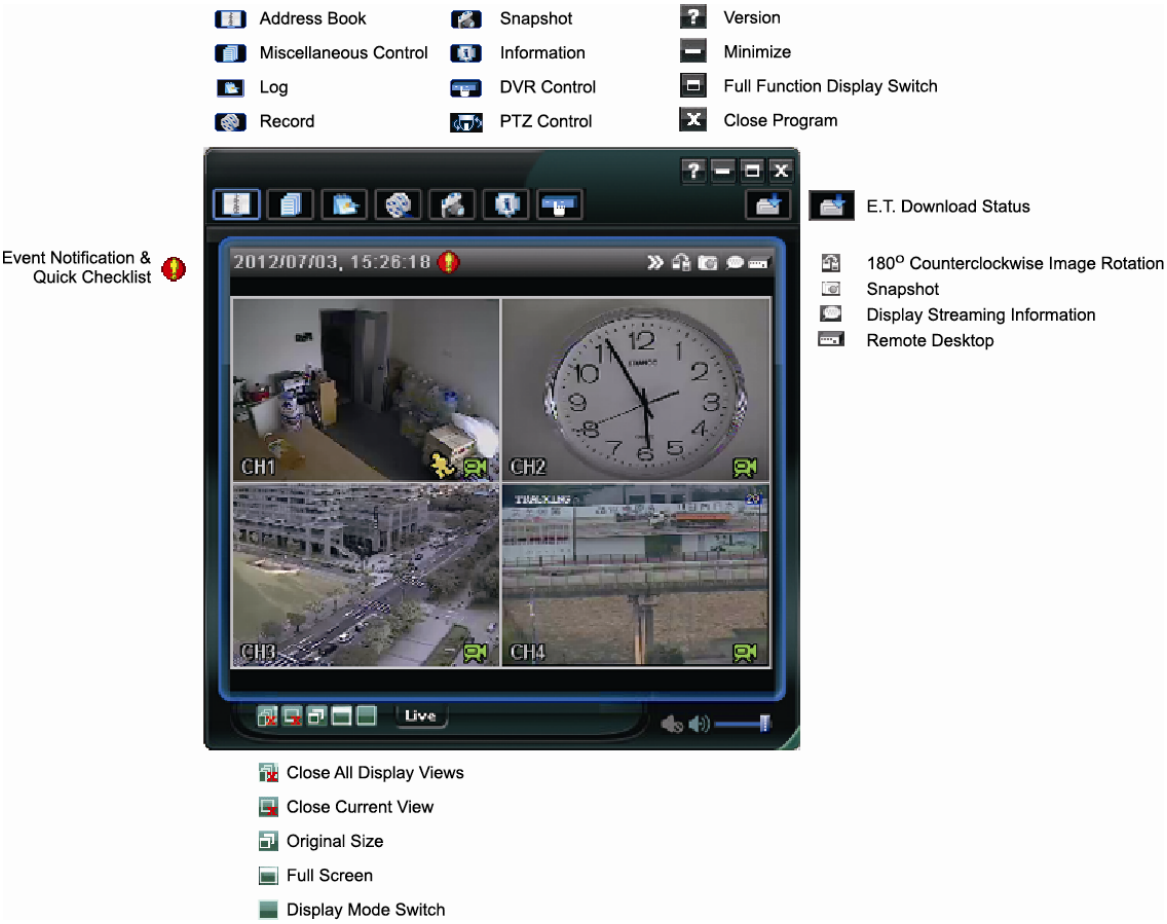

Full Function Version

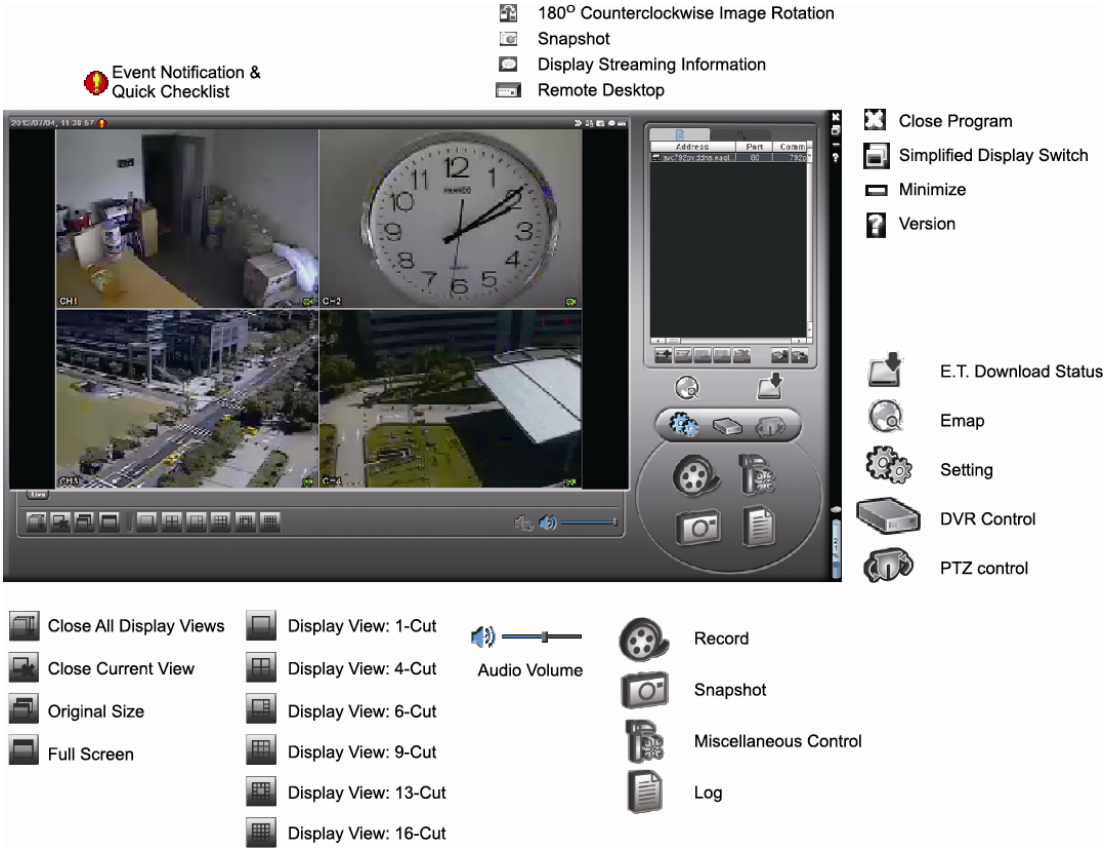

Main Button Overview

Button		Function	Description		
Simplified	Full Function				
		Address Book	Click to show the predefined IP address(es). You can add, remove or search the IP address to log in the DVR remotely.		
		Miscellaneous Control		Remote Config	Click to go into the detailed DVR setting.
				Record Setting	Click to go to the detailed record setting.
				Custom Setting	Click to choose the language of this program. The language change will take effect when this program is closed and executed again.
		Log	Click to view all event and recording logs, search the desired log(s) by date, or playback the recording of the selected log.		
		Record / Record Stop	Click to start / stop the manual recording.		

Button		Function	Description
Simplified	Full Function		
		Snapshot	Click to take a snapshot of the current view. The snapshot will be saved in the path you specified in “Record Setting”.
		Information	Click to show the current network connection details.
		DVR Control	Click to go to the DVR control panel to operate the DVR remotely.

6.1.3. General Operation

Record

To record remotely at the same time for any event or alarm at the DVR side, click “ ” or “ ” → “ ” to go to the “Record Setting” page.

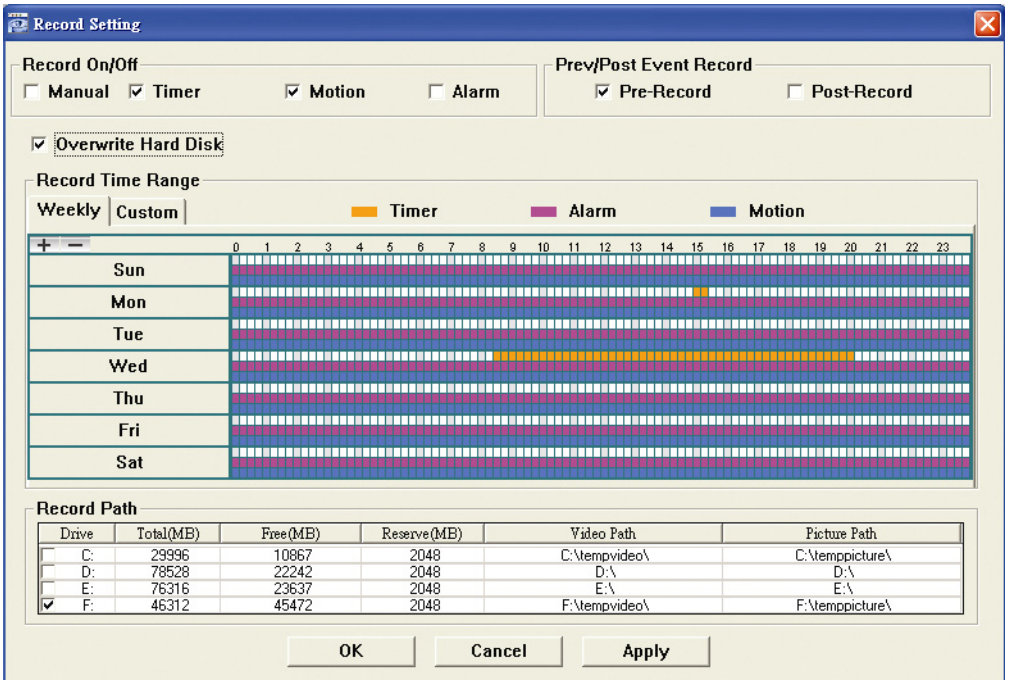

In the “Record Setting” page, you can set the following items:

- Record type
- Hard disk overwriting
- Pre- / post-alarm record
- Record time setting
- Record path

If “Manual” is checked, click “ ” or “ ” on the main control panel to start the manual recording immediately, and the recordings will be saved in the specified location.

If “Motion” and / or “Alarm” are checked, the recording function will also be enabled at the remote side when any event is triggered at the DVR side, and the recordings will be saved in the specified location.

Playback

To play a recording, click “ ” or “ ”, and select the “Record” tab or “Backup” tab. A list of all the recordings will be shown by defaults, and you can also sort out the logs you want to speed up the search time.

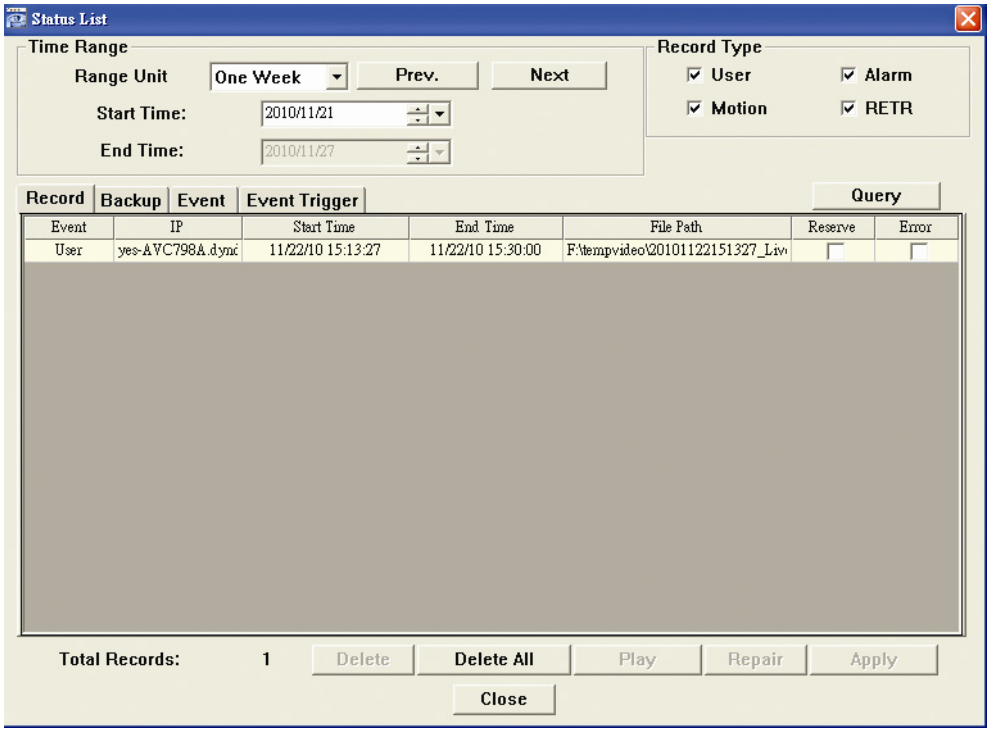

To immediately play a recording, select a log from the list, and click “Play”, or double-click the selected log.

Network Backup

Click “ ” → “ ”, or click “ ” to go into the “Backup” page as follows, and you can select a specific time range or event to make a video backup remotely.

The file(s) you backup will be from the currently selected IP address.

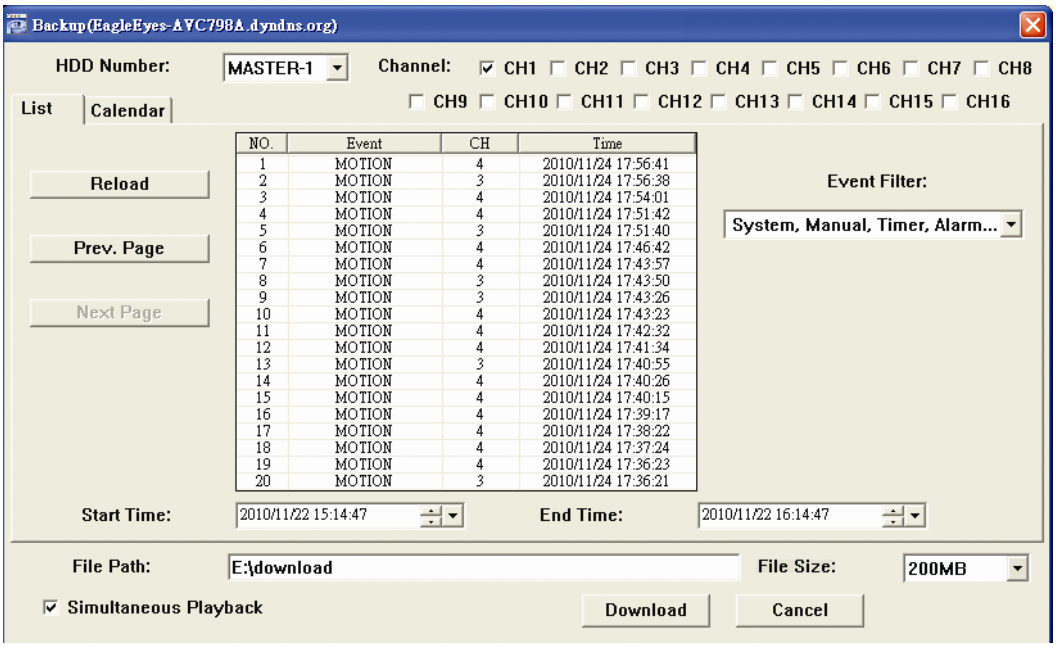

Function	Description
HDD Number / Channel	Specify the hard disk (HDD Number) and channel number (Channel) within which have the video data you need.
Download by Time	Specify the time range within which has the video data you want in the “Start Time” and “End Time” columns.
Download by Event	Select an event log from the event list. This list shows all logs in the specified DVR from the latest to the earliest. • To quickly find the events you need, check or uncheck the event type “System” / “Manual” / “Alarm” / “Motion”, and select the log you want. • To view the earlier or later logs that are not shown in the current page, click “Prev. Page” or “Next Page”. • To refresh the event list, click “Reload”.
File Path	Assign the location where the backup files are saved.
File Size	Select how you’d like the video to be divided by size: 200MB / 300MB / 400MB / 500MB / 1GB / 2GB / 3GB / 4GB.
Simultaneous Playback	To view the backup images simultaneously when the download process is in progress, select the checkbox “Simultaneous Playback”. You will see the backup images while the images are being downloaded to the PC or notebook. To simply backup images without previewing, deselect the checkbox “Simultaneous Playback”. You will only see a message box indicating the total time needed, the current status and the saving location.
Download / Cancel	Click “Download” to start or “Cancel” to discard the video backup.

Firmware Upgrade

This function is used to grade your DVR for function scalability.

Note: Before using this function, make sure you have the correct upgrade files provided by your installer or distributor.

Step1: Click " ", and select the IP address of your device in the address book.

Step2: Click " " to show the upgrade page, "Update Server".

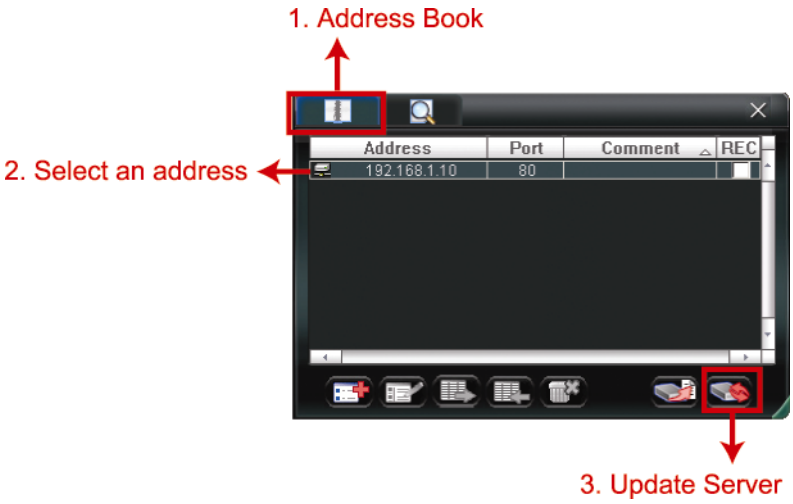

Step3: Click "Add" to browse to the upgrade files.

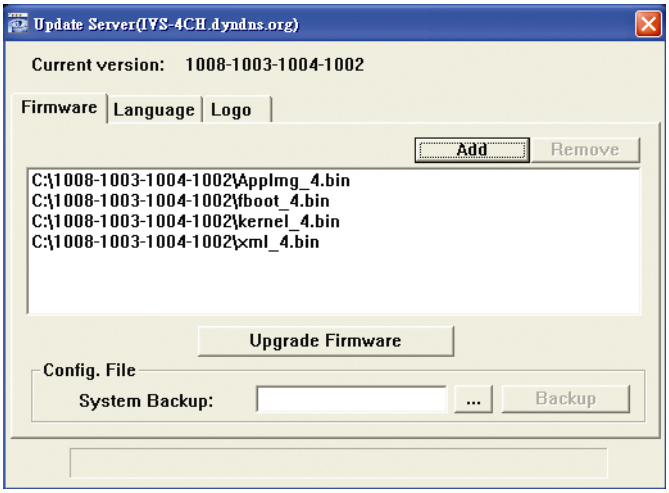

Step4: Click "Upgrade Firmware" to start firmware upgrade.

Note: It takes a few minutes to finish the upgrade process. Do not disconnect the power during firmware upgrade, or the upgrade may be failed. The device will reboot after the upgrade.

Step5: Select the IP address of the device and click " " again to check if the firmware is upgraded.

6.1.4. E-Map

Video Viewer is also a Central Management System (CMS) software, which allows network device control & management for up to 16 devices simultaneously.

Note: Before using this function, make sure Video Viewer is connected to all the devices (up to 16) you want to monitor.

E-Map is **ONLY** available when the control panel is switch to the full function version.

How to Add an E-Map Group

STEP1: In the simplified version, click " " to switch the control panel to the full function version, and click " " to enter the E-Map page as follows.

Note: To know where the buttons are, please refer to "Simplified Version (Default) at page 42, and "Full Function Version" at page 43.

STEP2: Right-click to show the shortcut menu on the top-left panel, and select the E-Map group you want to add. There are three E-Map groups you can add: Google E-MAP, Single E-MAP, and Building E-MAP.

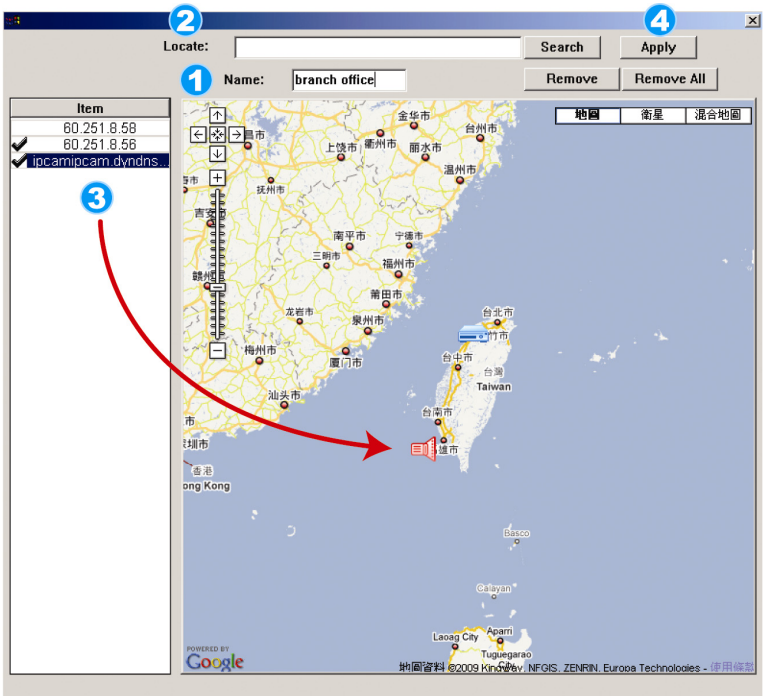

How to add a Google E-Map group:

1. Enter the name of this Google E-Map group.
2. Enter a specific address or landmark, and click “Search”.
   OR
   Move to the map and drag to the location you want.
3. Click and drag the IP address to where it’s located in the current level.
4. Click “Apply” to save and finish.

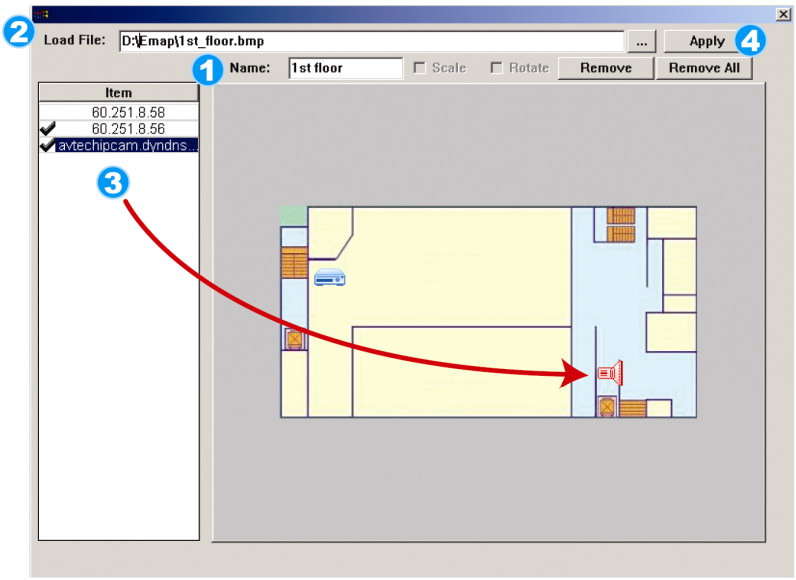

How to add a single E-Map group:

1. Enter the name of this single E-Map group.
2. Click “...” to browse the map file in BMP or JPEG.
3. Click and drag the IP address to where it’s located in the current level.
4. Click “Apply” to save and finish.

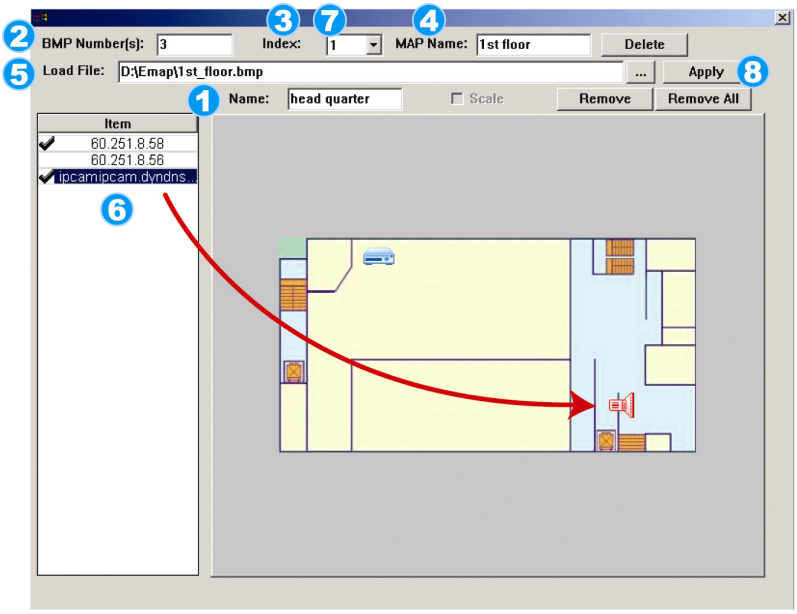

How to add a building E-Map group:

1. Enter the name of this building E-Map group.
2. Enter the total levels of this building.
3. Select the level of the building from the drop-down list.
4. Enter the name of the level.
5. Click “...” to browse the map file in BMP or JPEG.
6. Click and drag the IP address to where it’s located in the current level.
7. Go back to STEP 3 to select other level of the building, and repeat from STEP 3 to 6 until the setup for all levels are finished.
8. Click “Apply” to save and finish.

STEP3: When the E-Map group is created, you will see the tree on the top-left panel, showing all the devices you've added to this group.

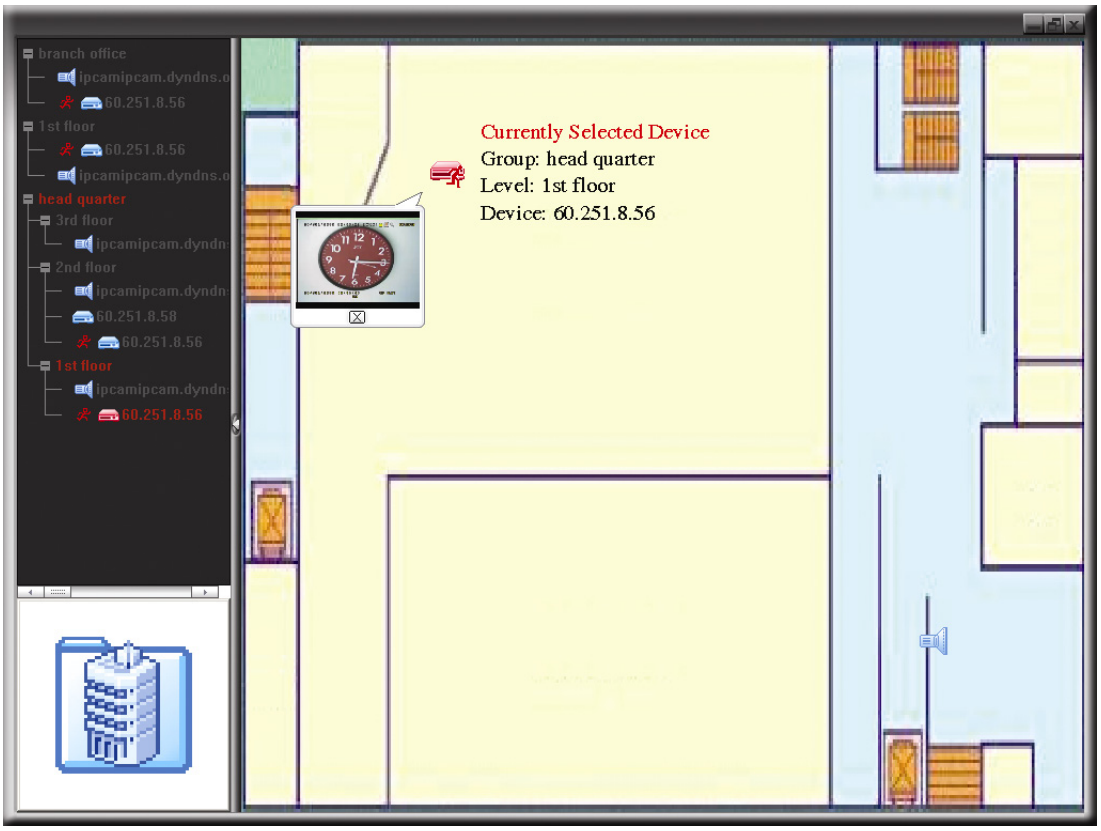

Icon	Description
	The connected device is camera. When it's selected, it will become red.
	The connected device is DVR. When it's selected, it will become red.
	For any motion or alarm event, it will appear on the screen to catch your attention. To know what's happening quickly, double-click the device icon on the E-Map to show the live view.

How to Edit / Remove an Existing E-Map Group

➢ For Google E-Map Group

Right-click on the group name to show the shortcut menu list, and select "Edit E-MAP" or "Remove E-MAP" as needed.

You can also add a single E-Map group (Add Single E-MAP) or Building E-Map group (Add Building E-MAP) into the existing Google E-Map group.

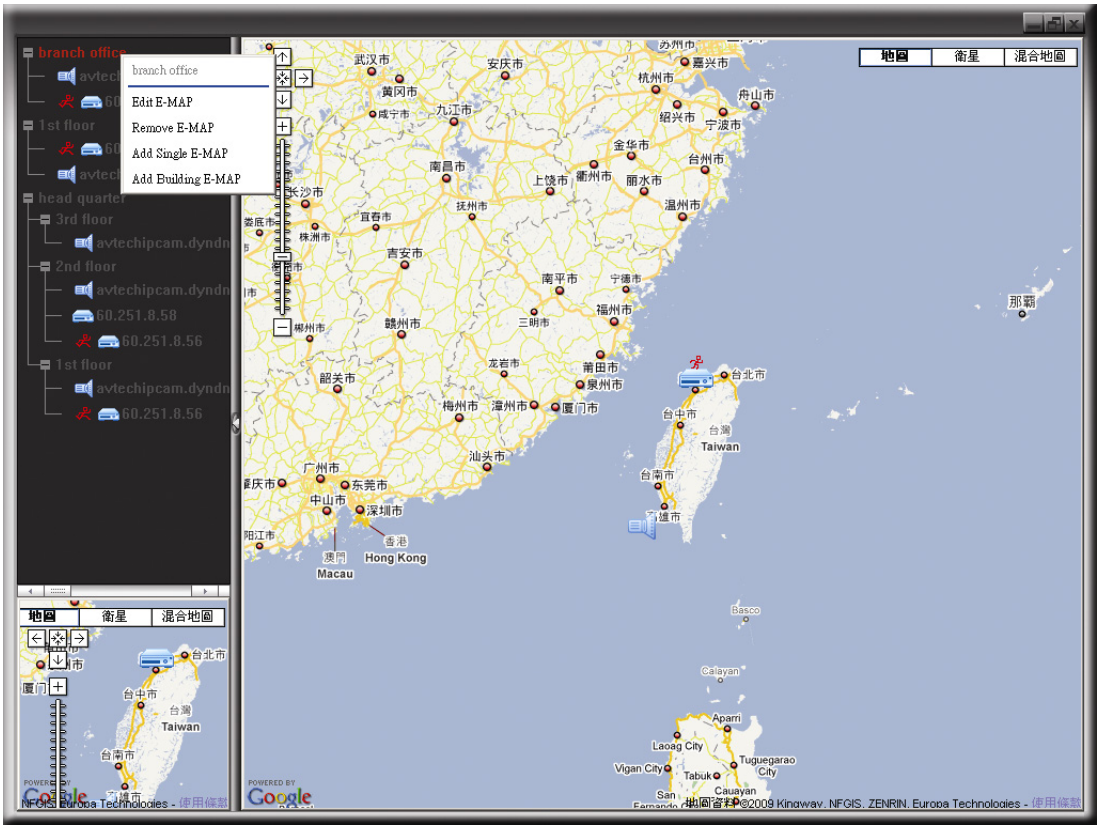

➢ For Single E-Map Group

Right-click on the group name to show the shortcut menu list, and select “Edit E-MAP” or “Remove E-MAP” as needed.

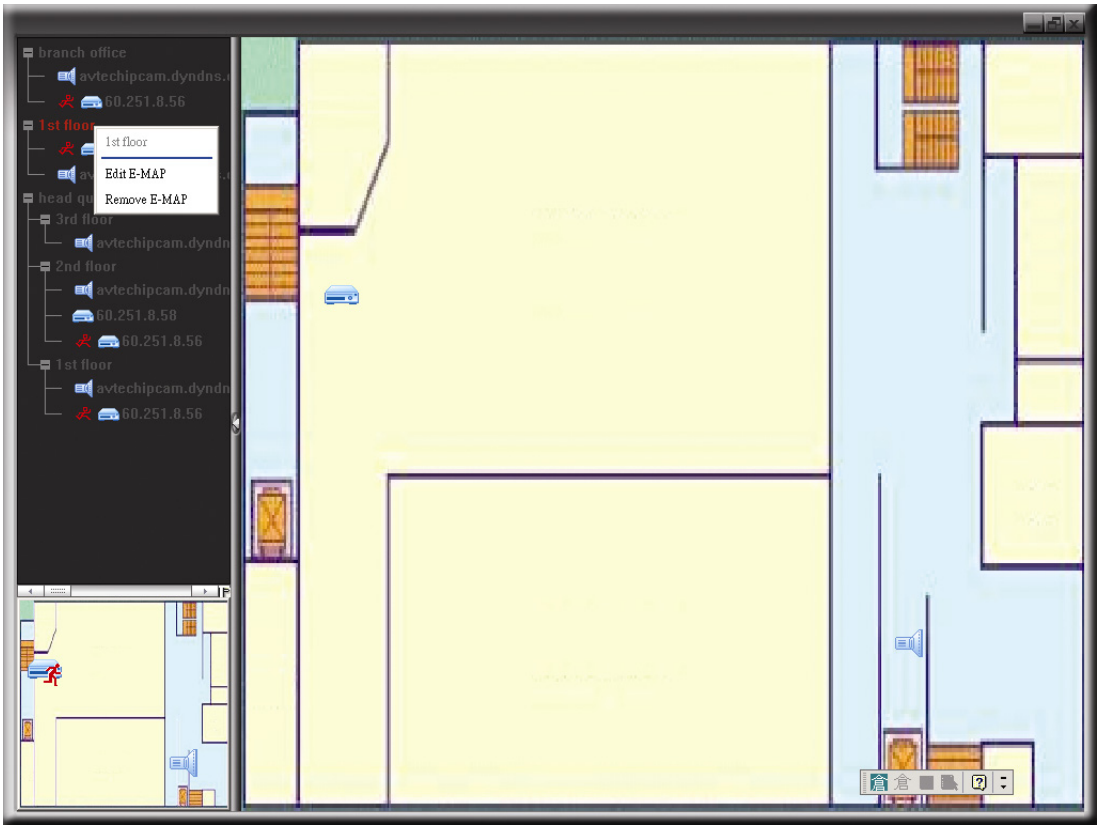

➢ For Building E-Map Group

Right-click on the group name to show the shortcut menu list, and select “Edit Building E-MAP” or “Remove E-MAP” as needed.

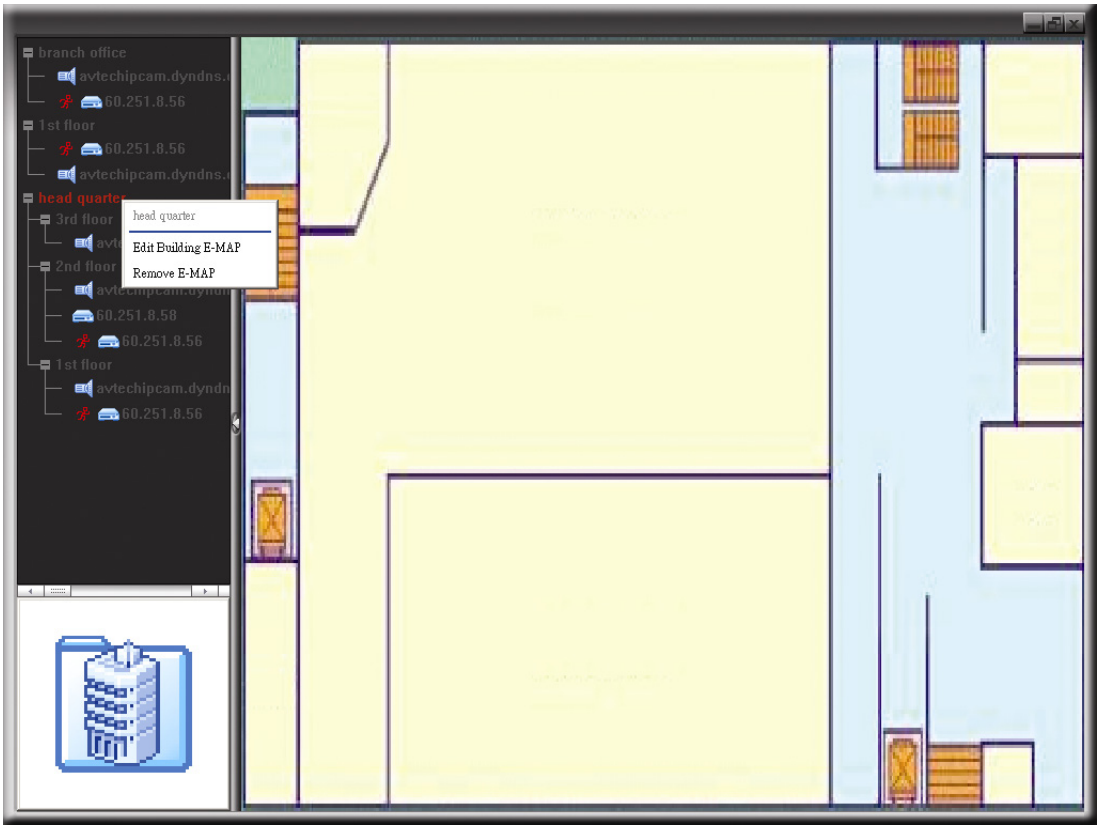

To edit or remove a certain level of the building E-Map group, right click on the level name, and select “Edit E-MAP” or “Remove E-MAP” as needed.

6.2 Web Browser

You can view the images or operate your DVR with a web browser, such as Internet Explorer, Mozilla Firefox or Google Chrome.

Note: The supported PC operation systems are Windows 7, Vista & XP.

Note: To use Mozilla Firefox or Google Chrome for remote access, please go to Apple's official website (http://www.apple.com/quicktime/win.html) to download and install QuickTime first.

Note: The illustration below is just for your reference and may be different from what you actually see on your DVR. Some functions and buttons are for selected models only.

Step 1: Key in the IP address used by your DVR in the URL address box, such as 60.121.46.236, and press Enter. You will be prompted to enter the user name and password to access the DVR.
If the port number your DVR used is NOT 80, you need to key in the port number additionally. The format is ***ipaddress:portnum***. For example, for IP address 60.121.46.236 and port No. 888, please key in "http://60.121.46.236:888" into the URL address box, and press "Enter".

Step 2: Enter the user name and password, the same as the ones used for video viewer login, and click "OK". You will see a similar screen as the following when the login information is correct.

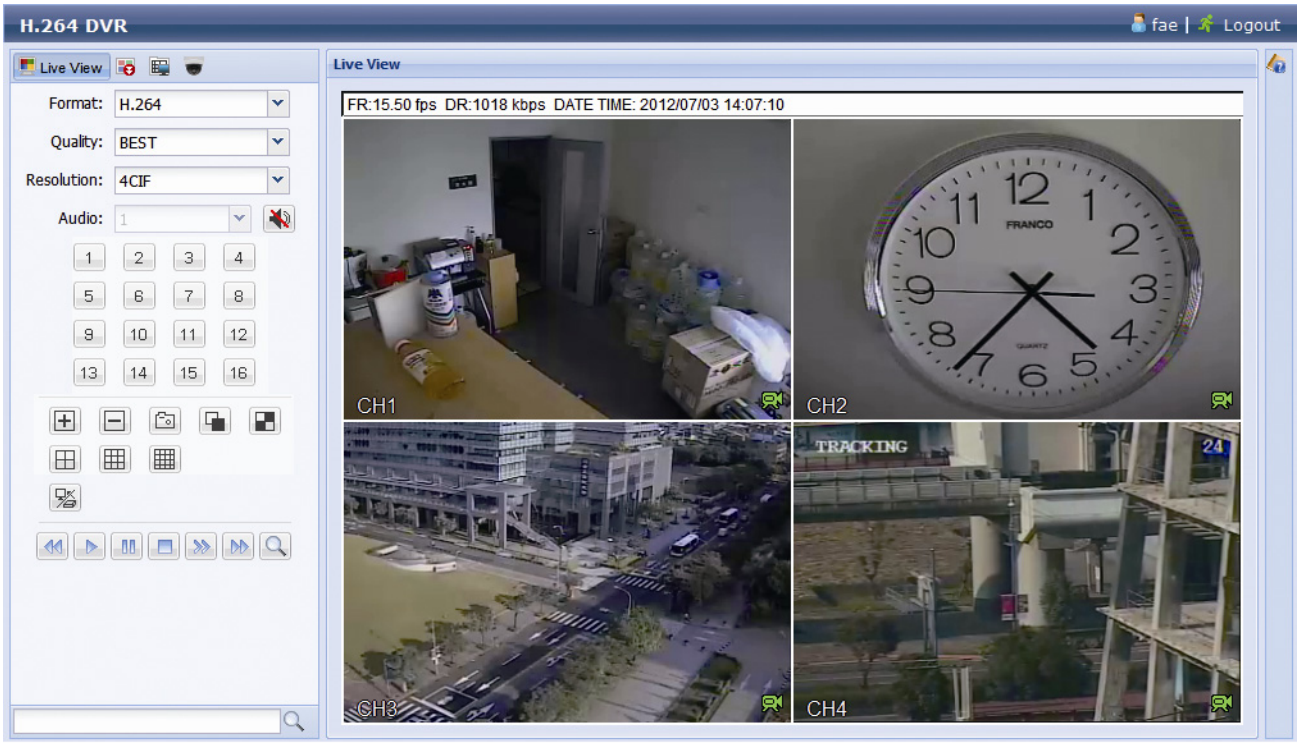

Icon	Description
	Click to go to the live view of the DVR.
	Click to enter the playback panel where you can search or select the event you want to play and download to your PC simultaneously. For details, please refer to "6.2.1 Event Download & Playback" at page 55.
	Click to go to the detailed DVR setting.
	Click to enter the PTZ mode.
Video / Audio Control	
Format	**H.264 / QuickTime** QuickTime is Apple Inc.'s multimedia software. You need to have QuickTime installed in you operation system first. When "QuickTime" is selected, you will be promoted to enter the user name and password to access the server of the DVR.
Quality	**BEST / HIGH / NORMAL / BASIC** Select the image quality.
Resolution	4CIF: 704*480 pixels / CIF: 352*240 pixels
Audio	Select the audio channel you want for listening to the live audio. Note: Your camera must support audio recording, and connect to the video channel which supports audio recording and the audio input of the DVR. For details, please refer to "1.3 Rear Panel" at page 2. means mute. To disable the mute status, click this icon again and select the audio channel you want.
Channel Control	
Channel Selection	Click one of the channel numbers to switch to the channel you want to see in full screen.
	Click to go to the previous / next channel, or change setting.
	Click to take a snapshot of the current view, and save it to the specified path in your PC set in " " → "General".
	: Click to display four channels at a time. When the last channel is displayed, it will start from CH1 again. : Click to display each channel one by one, starting from CH1. When the last channel is displayed, it will start from CH1 again. To exit from this display mode, press any other channel display button.
	Click to show 4-cut / 9-cut / 16-cut display.
	Click to access the DVR local view remotely and control as you're at the local side.
Playback Control	
	Increase the speed for fast rewind. Click once to get 4X speed rewind and click twice to get 8X speed, etc., and the maximum speed is 16X.
	Increase the speed for fast forward. Click once to get 4X speed forward and click twice to get 8X speed, etc., and the maximum speed is 16X.

Icon	Description
	Click to play the current video clip.
	Click to pause the video playback.
	Click to stop the video playback.
	Click to play the video clip slowly, once to get 4X slower, twice get 8X slower.
	Click to open the playback search panel.

6.2.1 Event Download & Playback

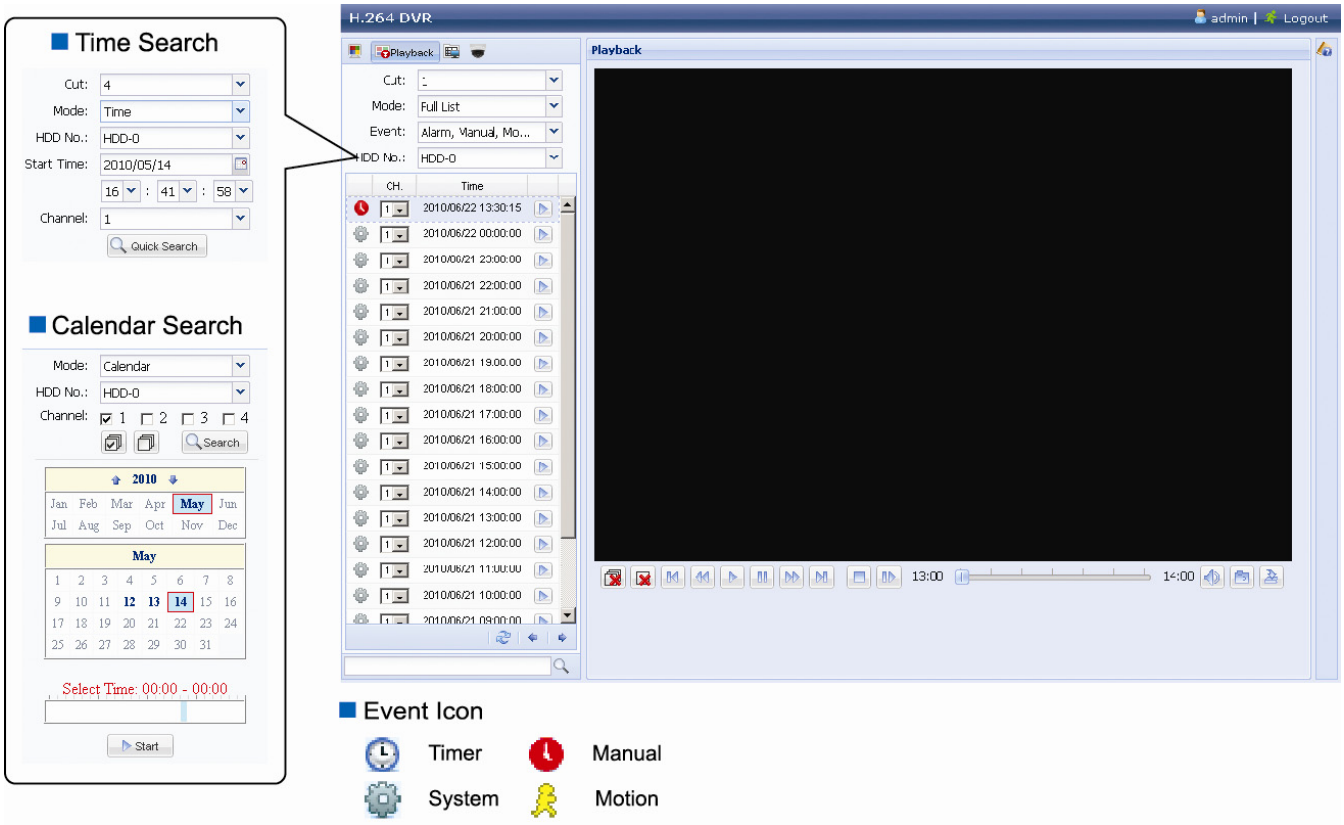

/	Close all / Close	Click to close the current playback video clip (in the red frame), or to close all playback video clips.
/	Previous / Next Hour	Click to jump to the next / previous time interval in an hour, for example, 11:00 ~ 12:00 or 14:00 ~ 15:00, and start playing the earliest event video clip recorded during this whole hour.
	Fast Forward	Increase the speed for fast rewind. Click once to get 4X speed rewind and click twice to get 8X speed, etc., and the maximum speed is 16X.
	Fast Rewind	Increase the speed for fast forward. Click once to get 4X speed forward and click twice to get 8X speed, etc., and the maximum speed is 16X.
	Play	Click to play the current video clip.
	Pause	Click to pause the video playback.
	Stop	Click to stop the video playback.
	Step	In the pause mode, click to get one frame forward.

	Audio	Click to mute the playback if necessary, and click again to restore. **Note:** Audio is available when your camera supports audio recording, and connects to the video channel which supports audio recording and the audio input of the DVR. For details, please refer to "1.3 Rear Panel" at page 2.
	Snapshot	Click to take a snapshot of the current view, and save it to the specified path in your PC set in " " → "General".
	Download	Click to download the current video clip to the specified path in your PC.

APPENDIX 1 SPECIFICATIONS

➢ For 16CH Models with HD video output

		Model 1	Model 2	Model 3
▼ Video				
Video System		NTSC / PAL (auto detection)		
Video Compression Format		H.264		
Video Input		16 channels (Composite video signal 1 Vp-p 75Ω BNC)		
Video Loop Output		16 channels (Composite video signal 1 Vp-p 75Ω BNC)	--	
Video Output (BNC)	Main Monitor	For stable display		
	Call Monitor	For sequence display	--	
Video Output (VGA)		YES (HD display)		
Video Output (HD Display)		YES (HD display)		
Triple Video Output		YES		
▼ Record & Backup				
Maximum Recording Rate	Frame	704×480 pixels with 120 IPS <NTSC> / 704×576 pixels with 100 IPS <PAL>		
	Field	704x240 pixels with 240 IPS <NTSC> / 704×288 pixels with 200 IPS <PAL>	--	
	CIF	352×240 pixels with 480 IPS <NTSC> / 352×288 pixels with 400 IPS <PAL>		
Recording Mode		Manual / Timer / Motion / Alarm / Remote		
Pre-alarm Recording		YES		
Backup Device		DVD Writer (optional) / USB 2.0 flash drive / Network		
Quick Search		Time / Motion / Alarm search mode		
▼ Audio				
Audio Input		4 audio inputs		
Audio Output		2 audio outputs (Mono)	1 audio output (Mono)	
▼ General				
Hard Disk Storage		2 SATA HDDs		
SATA Interface		Built-in		
Image Quality Setting		SUPER BEST / BEST / HIGH / NORMAL		
USB Mouse Control		YES		
Motion Detection Area		16 × 12 grids per channel		
Motion Detection Sensitivity		3 adjustable parameters for accurate detection		
Event Notification		Push Video / FTP / E-Mail		
Picture Zoom		2X digital zoom		
PTZ Control		YES		
Alarm I/O		4 inputs (4 inputs for Push Video), 1 output		
IR Remote Control		YES (IR receiver built-in)		
Key Lock (Password Protection)		YES		
User Level		Administrator & Operator		
Video Loss Detection		YES		
Camera Title		Supports up to 12 letters		
Video Adjustable		Hue / Saturation / Contrast / Brightness		
Date Display Format		YY/MM/DD, DD/MM/YY & MM/DD/YY		
Daylight Saving		YES		
Power Source (±10%)		DC 19V		
Power Consumption (±10%)		< 64 W		
Operating Temperature		10℃ ~ 40℃ (50℉~104℉)		
Dimensions (mm)**		432(W) × 90(H) × 326(D)		430(W) x 65(H) x 338(D)

▼ Network		
Ethernet	10/100 Base-T. Supports remote control and live view via Ethernet	
Network Protocol	TCP/IP, PPPOE, DHCP and DDNS	
Web Transmitting Compression Format	H.264	
▼ Remote Surveillance from PC		
Compatible Operating System	Windows & MAC	
Compatible Program	Web Browser:	Internet Explorer, Mozilla Firefox, Google Chrome, Safari & Opera
	Video Viewer:	For both Windows and MAC operating systems
	QuickTime:	For both Windows and MAC operating systems
Max. online users	10	
Network Live Audio	YES	
Remote Independent Operation	YES	
Remote Event Download & Playback	YES	
R.E.T.R. (Remote Event Trigger Recording)	YES	--
▼ Mobile Surveillance		
App	EagleEyes	
Compatible Devices	iPad, iPhone, BlackBerry, Windows Mobile, Symbian & Android mobile devices	
Push Video	YES (With EagleEyes for iPhone, iPad, Android versions)	
▼ Others		
AVTECH Free DDNS service	YES	
Multiplex Operation	Live display / record / playback / backup / network operations	
System Recovery	System auto recovery after power failure	

* The specifications are subject to change without notice.
** 1 HDD capacity up to 2TB
*** Dimensional Tolerance: ±5mm

➢ For 16CH Models without HD video output

		Model 4	Model 5	Model 6
▼ Video				
Video System		NTSC / PAL (auto detection)		
Video Compression Format		H.264		
Video Input		16 channels (Composite video signal 1 Vp-p 75Ω BNC)		
Video Loop Output		16 channels (Composite video signal 1 Vp-p 75Ω BNC)	--	
Video Output (BNC)	Main Monitor	For stable display		
	Call Monitor	For sequence display	--	
Video Output (VGA)		YES (Output resolution up to 1600 x 1200)		
Dual Video Output		YES		
▼ Record & Backup				
Maximum Recording Rate	Frame	704×480 pixels with 120 IPS <NTSC> / 704×576 pixels with 100 IPS <PAL>		
	Field	704x240 pixels with 240 IPS <NTSC> / 704×288 pixels with 200 IPS <PAL>	--	
	CIF	352×240 pixels with 480 IPS <NTSC> / 352×288 pixels with 400 IPS <PAL>		
Recording Mode		Manual / Timer / Motion / Alarm / Remote		
Pre-alarm Recording		YES		
Backup Device		DVD Writer (optional) / USB 2.0 flash drive / Network		
Quick Search		Time / Motion / Alarm search mode		
▼ Audio				
Audio Input		4 audio inputs		
Audio Output		2 audio outputs (Mono)	1 audio output (Mono)	
▼ General				
Hard Disk Storage		2 SATA HDDs		
SATA Interface		Built-in		
Image Quality Setting		SUPER BEST / BEST / HIGH / NORMAL		
USB Mouse Control		YES		
Motion Detection Area		16 × 12 grids per channel		
Motion Detection Sensitivity		3 adjustable parameters for accurate detection		
Event Notification		Push Video / FTP / E-Mail		
Picture Zoom		2X digital zoom		
PTZ Control		YES		
Alarm I/O		16 inputs (4 inputs for Push Video), 1 output		
IR Remote Control		YES (IR receiver built-in)		
Key Lock (Password Protection)		YES		
User Level		Administrator & Operator		
Video Loss Detection		YES		
Camera Title		Supports up to 12 letters		
Video Adjustable		Hue / Saturation / Contrast / Brightness		
Date Display Format		YY/MM/DD, DD/MM/YY & MM/DD/YY		
Daylight Saving		YES		
Power Source (±10%)		DC 19V		
Power Consumption (±10%)		< 64 W		
Operating Temperature		10℃ ~ 40℃ (50℉~104℉)		
Dimensions (mm)**		432(W) × 90(H) × 326(D)		430(W) x 65(H) x 338(D)

▼ Network		
Ethernet	10/100 Base-T. Supports remote control and live view via Ethernet	
Network Protocol	TCP/IP, PPPOE, DHCP and DDNS	
Web Transmitting Compression Format	H.264	
▼ Remote Surveillance from PC		
Compatible Operating System	Windows & MAC	
Compatible Program	Web Browser: Internet Explorer, Mozilla Firefox, Google Chrome, Safari & Opera	
	Video Viewer: For both Windows and MAC operating systems	
	QuickTime: For both Windows and MAC operating systems	
Max. online users	10	
Network Live Audio	YES	
Remote Independent Operation	YES	
Remote Event Download & Playback	YES	
R.E.T.R. (Remote Event Trigger Recording)	YES	--
▼ Mobile Surveillance		
App	EagleEyes	
Compatible Devices	iPad, iPhone, BlackBerry, Windows Mobile, Symbian & Android mobile devices	
Push Video	YES (With EagleEyes for iPhone, iPad, Android versions)	
▼ Others		
AVTECH Free DDNS service	YES	
Multiplex Operation	Live display / record / playback / backup / network operations	
System Recovery	System auto recovery after power failure	

* The specifications are subject to change without notice.
** 1 HDD capacity up to 2TB
*** Dimensional Tolerance: ±5mm

➢ For 8CH Models with HD video output

		Model 7	Model 8	Model 9	Model 10
▼ Video					
Video System		NTSC / PAL (auto detection)			
Video Compression Format		H.264			
Video Input		8 channels (Composite video signal 1 Vp-p 75Ω BNC)			
Video Loop Output		8 channels (Composite video signal 1 Vp-p 75Ω BNC)	--		
Video Output (BNC)	Main Monitor	For stable display			
	Call Monitor	For sequence display	--		For sequence display
Video Output (VGA)		YES (HD display)			
Video Output (HD Display)		YES (HD display)			
Triple Video Output		YES			
▼ Record & Backup					
Maximum Recording Rate	Frame	704×480 pixels with 120 IPS <NTSC> / 704×576 pixels with 100 IPS <PAL>			
	Field	704x240 pixels with 240 IPS <NTSC> / 704×288 pixels with 200 IPS <PAL>	--		
	CIF	352×240 pixels with 240 IPS <NTSC> / 352×288 pixels with 200 IPS <PAL>			
Recording Mode		Manual / Timer / Motion / Alarm / Remote			
Pre-alarm Recording		YES			
Backup Device		DVD Writer (optional) / USB 2.0 flash drive / Network		USB 2.0 flash drive / Network	
Quick Search		Time / Motion / Alarm search mode			
▼ Audio					
Audio Input		4 audio inputs			
Audio Output		2 audio outputs (Mono)	1 audio output (Mono)		
▼ General					
Hard Disk Storage		2 SATA HDDs			1 SATA HDD
SATA Interface		Built-in			
Image Quality Setting		SUPER BEST / BEST / HIGH / NORMAL			
USB Mouse Control		YES			
Motion Detection Area		16 × 12 grids per channel			
Motion Detection Sensitivity		3 adjustable parameters for accurate detection			
Event Notification		Push Video / FTP / E-Mail			
Picture Zoom		2X digital zoom			
PTZ Control		YES			
Alarm I/O		2 inputs (2 inputs for Push Video), 1 output			1 input (for Push Video), 1 output
IR Remote Control		YES (IR receiver built-in)			
Key Lock (Password Protection)		YES			
User Level		Administrator & Operator			
Video Loss Detection		YES			
Camera Title		Supports up to 12 letters			
Video Adjustable		Hue / Saturation / Contrast / Brightness			
Date Display Format		YY/MM/DD, DD/MM/YY & MM/DD/YY			
Daylight Saving		YES			

Power Source (±10%)	DC 19V		
Power Consumption (±10%)	< 64 W		< 42 W
Operating Temperature	10℃ ~ 40℃ (50℉~104℉)		
Dimensions (mm)**	432(W) × 90(H) × 326(D)	430(W) x 65(H) x 338(D)	343(W) x 59(H) x 223(D)
▼ Network			
Ethernet	10/100 Base-T. Supports remote control and live view via Ethernet		
Network Protocol	TCP/IP, PPPOE, DHCP and DDNS		
Web Transmitting Compression Format	H.264		
▼ Remote Surveillance from PC			
Compatible Operating System	Windows & MAC		
Compatible Program	Web Browser:	Internet Explorer, Mozilla Firefox, Google Chrome, Safari & Opera	
	Video Viewer:	For both Windows and MAC operating systems	
	QuickTime:	For both Windows and MAC operating systems	
Max. online users	10		
Network Live Audio	YES		
Remote Independent Operation	YES		
Remote Event Download & Playback	YES		
R.E.T.R. (Remote Event Trigger Recording)	YES	--	
▼ Mobile Surveillance			
App	EagleEyes		
Compatible Devices	iPad, iPhone, BlackBerry, Windows Mobile, Symbian & Android mobile devices		
Push Video	YES (With EagleEyes for iPhone, iPad, Android versions)		
▼ Others			
AVTECH Free DDNS service	YES		
Multiplex Operation	Live display / record / playback / backup / network operations		
System Recovery	System auto recovery after power failure		

* The specifications are subject to change without notice.
** 1 HDD capacity up to 2TB
*** Dimensional Tolerance: ±5mm

➢ For 8CH Models without HD video output

		Model 11	Model 12	Model 13
▼ Video				
Video System		NTSC / PAL (auto detection)		
Video Compression Format		H.264		
Video Input		8 channels (Composite video signal 1 Vp-p 75Ω BNC)		
Video Loop Output		8 channels (Composite video signal 1 Vp-p 75Ω BNC)	--	
Video Output (BNC)	Main Monitor	For stable display		
	Call Monitor	For sequence display	--	
Video Output (VGA)		YES (Output resolution up to 1600 x 1200)		
Dual Video Output		YES		
▼ Record & Backup				
Maximum Recording Rate	Frame	704×480 pixels with 120 IPS <NTSC> / 704×576 pixels with 100 IPS <PAL>		
	Field	704x240 pixels with 240 IPS <NTSC> / 704×288 pixels with 200 IPS <PAL>	--	
	CIF	352×240 pixels with 240 IPS <NTSC> / 352×288 pixels with 200 IPS <PAL>		
Recording Mode		Manual / Timer / Motion / Alarm / Remote		
Pre-alarm Recording		YES		
Backup Device		DVD Writer (optional) / USB 2.0 flash drive / Network		
Quick Search		Time / Motion / Alarm search mode		
▼ Audio				
Audio Input		4 audio inputs		
Audio Output		2 audio outputs (Mono)	1 audio output (Mono)	
▼ General				
Hard Disk Storage		2 SATA HDDs		
SATA Interface		Built-in		
Image Quality Setting		SUPER BEST / BEST / HIGH / NORMAL		
USB Mouse Control		YES		
Motion Detection Area		16 × 12 grids per channel		
Motion Detection Sensitivity		3 adjustable parameters for accurate detection		
Event Notification		Push Video / FTP / E-Mail		
Picture Zoom		2X digital zoom		
PTZ Control		YES		
Alarm I/O		8 inputs (2 inputs for Push Video), 1 output		
IR Remote Control		YES (IR receiver built-in)		
Key Lock (Password Protection)		YES		
User Level		Administrator & Operator		
Video Loss Detection		YES		
Camera Title		Supports up to 12 letters		
Video Adjustable		Hue / Saturation / Contrast / Brightness		
Date Display Format		YY/MM/DD, DD/MM/YY & MM/DD/YY		
Daylight Saving		YES		
Power Source (±10%)		DC 19V		
Power Consumption (±10%)		< 64 W		
Operating Temperature		10℃ ~ 40℃ (50℉~104℉)		
Dimensions (mm)**		432(W) × 90(H) × 326(D)		430(W) x 65(H) x 338(D)

▼ Network		
Ethernet	10/100 Base-T. Supports remote control and live view via Ethernet	
Network Protocol	TCP/IP, PPPOE, DHCP and DDNS	
Web Transmitting Compression Format	H.264	
▼ Remote Surveillance from PC		
Compatible Operating System	Windows & MAC	
Compatible Program	Web Browser:	Internet Explorer, Mozilla Firefox, Google Chrome, Safari & Opera
	Video Viewer:	For both Windows and MAC operating systems
	QuickTime:	For both Windows and MAC operating systems
Max. online users	10	
Network Live Audio	YES	
Remote Independent Operation	YES	
Remote Event Download & Playback	YES	
R.E.T.R. (Remote Event Trigger Recording)	YES	--
▼ Mobile Surveillance		
App	EagleEyes	
Compatible Devices	iPad, iPhone, BlackBerry, Windows Mobile, Symbian & Android mobile devices	
Push Video	YES (With EagleEyes for iPhone, iPad, Android versions)	
▼ Others		
AVTECH Free DDNS service	YES	
Multiplex Operation	Live display / record / playback / backup / network operations	
System Recovery	System auto recovery after power failure	

* The specifications are subject to change without notice.
** 1 HDD capacity up to 2TB
*** Dimensional Tolerance: ±5mm

➢ For 4CH Models

		Model 14	Model 15
▼ Video			
Video System		NTSC / PAL (auto detection)	
Video Compression Format		H.264	
Video Input (Composite video signal 1 Vp-p 75Ω BNC)		4 channels	
Video Output (BNC)		Main Monitor Output: for stable display	
Video Output (VGA)		YES (HD display)	YES (Up to 1600 x 1200)
Video Output (HD Display)		YES (HD display)	--
Video Output		Triple video output	Dual video output
▼ Record & Backup			
Maximum Recording Rate	Frame	704×480 pixels with 120 IPS <NTSC> / 704×576 pixels with 100 IPS <PAL>	
	Field	704x240 pixels with 120 IPS <NTSC> / 704×288 pixels with 100 IPS <PAL>	
	CIF	352×240 pixels with 120 IPS <NTSC> / 352×288 pixels with 100 IPS <PAL>	
Recording Mode		Manual / Timer / Motion / Alarm / Remote	
Pre-alarm Recording		YES	
Backup Device		USB 2.0 flash drive / Network	
Quick Search		Time / Motion / Alarm search mode	
▼ Audio			
Audio Input		4 audio inputs	
Audio Output		1 audio output (Mono)	
▼ General			
Hard Disk Storage		1 SATA HDD	
SATA Interface		Built-in	
Image Quality Setting		SUPER BEST / BEST / HIGH / NORMAL	
USB Mouse Control		YES	
Motion Detection Area		16 × 12 grids per channel	
Motion Detection Sensitivity		3 adjustable parameters for accurate detection	
Event Notification		Push Video / FTP / E-Mail	
Picture Zoom		2X digital zoom	
PTZ Control		YES	
Alarm I/O		1 input (1 input for Push Video), 1 output	
IR Remote Control		YES (IR receiver built-in)	
Key Lock (Password Protection)		YES	
User Level		Administrator & Operator	
Video Loss Detection		YES	
Camera Title		Supports up to 12 letters	
Video Adjustable		Hue / Saturation / Contrast / Brightness	
Date Display Format		YY/MM/DD, DD/MM/YY & MM/DD/YY	
Daylight Saving		YES	
Power Source (±10%)		DC 19V	
Power Consumption (±10%)		＜40 W	
Operating Temperature		10℃ ~ 40℃ (50℉~104℉)	
Dimensions (mm)**		343(W) x 59(H) x 223(D)	

▼ Network	
Ethernet	10/100 Base-T. Supports remote control and live view via Ethernet
Network Protocol	TCP/IP, PPPOE, DHCP and DDNS
Web Transmitting Compression Format	H.264
▼ Remote Surveillance from PC	
Compatible Operating System	Windows & MAC
Compatible Program	Web Browser: Internet Explorer, Mozilla Firefox, Google Chrome, Safari & Opera
	Video Viewer: For both Windows and MAC operating systems
	QuickTime: For both Windows and MAC operating systems
Max. online users	10
Network Live Audio	YES
Remote Independent Operation	YES
Remote Event Download & Playback	YES
▼ Mobile Surveillance	
App	EagleEyes
Compatible Devices	iPad, iPhone, BlackBerry, Windows Mobile, Symbian & Android mobile devices
Push Video	YES (With EagleEyes for iPhone, iPad, Android versions)
▼ Others	
AVTECH Free DDNS service	YES
Multiplex Operation	Live display / record / playback / backup / network operations
System Recovery	System auto recovery after power failure

* The specifications are subject to change without notice.
** 1 HDD capacity up to 2TB
*** Dimensional Tolerance: ±5mm

APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST

Please upgrade the firmware of the DVR to the latest version to ensure the accuracy of the following table. If the USB flash drive is not supported by the DVR, the “USB ERROR” message will be shown on the screen.

Note: Please use your PC to format the USB flash drive as “FAT32”.

Note: You can backup up to 2GB video data for one-time USB backup. To backup more data, please set the time & channel(s) you want, and start USB backup again.

MANUFACTURER	MODEL	CAPACITY
Transcend	JFV35	4GB
	JFV30	8GB
Kingston	DataTraveler	1GB
PQI	U172P	4GB
Apacer	AH320	2GB
	AH320A	8GB
	AH220	1GB
	AH320	4GB
A-data	RB-18	1GB
Sandisk	Cruzer Micro	2GB
	Cruzer Micro	4GB
	Cruzer4-pk	2GB
Netac	U208	1GB
MSI	F200	4GB
SONY	Micro Vault Tiny 2G	2GB
	Micro Vault Tiny 4G	4GB
	Micro Vault Tiny	1GB

APPENDIX 3 COMPATIBLE SATA HDD LIST

Please upgrade the firmware of the DVR to the latest version to ensure the accuracy of the following table.

MANUFACTURER	MODEL	CAPACITY	ROTATION
Seagate	ST3320613AS	320GB	7200 rpm
	ST33500320AS	500GB	7200 rpm
	ST3500410SV	500GB	7200 rpm
	ST3750330AS	750GB	7200 rpm
	ST31000525SV	1000GB	7200 rpm
	ST31000340AS	1000GB	7200 rpm
WD	WD3200AAKS	320GB	7200 rpm
	WD5000AACS	500GB	7200 rpm
	WD6400AAKS	640GB	7200 rpm
	WD7500AAKS	750GB	7200 rpm
	WD10EADS	1TB	7200 rpm
	WD15EADS	1.5TB	7200 rpm
	WD20EADS	2TB	7200 rpm
Maxtor	STM3500320AS	500GB	7200 rpm
	STM3750330AS	750GB	7200 rpm
HITACHI	HDT725032VLA360	320GB	7200 rpm
	HDS721010KLA330	1000GB	7200 rpm

APPENDIX 4 MAIN MENU STRUCTURE

	QUICK START	GENERAL	CHANNEL TITLE
			EVENT STATUS
			DATE DISPLAY
			MOUSE SENSITIVITY
			PRIORITY *(For 4CH Models Only)*
			RECORD CONFIG
		TIME SETUP	DATE
			TIME
	DATE SETUP	DATE INFO	DISPLAY DATE OF MODE
			FORMAT
		DAYLIGHT	DAYLIGHT SAVING
	SYSTEM	ACCOUNT	USER LEVEL
		TOOLS	LANGUAGE
			ADVANCED LOGIN
			ADMIN PASSWORD
			OPERATOR PASSWORD
			UPGRADE
			BACKUP CONFIG
			RESTORE CONFIG
		SYSTEM INFO	BAUD RATE
			HOST ID
			AUTO KEY LOCK
			CLEAR HDD
			RESET DEFAULT
			REMOTE CONTROL ID
			SERIAL TYPE
			VIDEO FORMAT
			VERSION
		BACKUP DATA (USB)	
		BACKUP DATA (DVD) *(For Selected Models Only)*	
		BACKUP LOG (USB)	
	EVENT INFORMATION	QUICK SEARCH	
		EVENT SEARCH	
		HDD INFO	
		EVENT LOG	
		BACKUP LIST	
	ADVANCED CONFIG	CAMERA	BRIGHTNESS
			CONTRAST
			SATURATION
			HUE
			COV.
			REC
			CHANNEL TITLE
		DETECTION	LS
			SS
			TS
			MOTION
			ALARM
			AREA

	ADVANCED CONFIG	ALERT	EXT. ALERT
			INT. BUZZER
			KEY BUZZER
			VLOSS BUZZER
			MOTION BUZZER
			ALARM BUZZER
			HDD BUZZER
			ALARM DURATION (SEC)
			HDD NEARLY FULL (GB)
		NETWORK	NETWORK
			SNTP
			FTP
			E-MAIL
			DDNS
		DISPLAY	DE-INTERLACE *(For Selected Models Only)*
			FULL SCREEN DURATION
			QUAD SCREEN DURATION *(For Selected Models Only)*
			DWELL SCREEN DURATION *(For Selected Models Only)*
			DISPLAY COVERT
			HDD DISPLAY MODE
			VIDEO OUTPUT *(For Selected Models Only)*
			ALPHA BLENDING
			VGA OUTPUT
		RECORD	MANUAL RECORD
			EVENT RECORD
			TIMER RECORD
			PRE-ALARM RECORD
			OVERWRITE
			EVENT RECORD ALL CH.
			KEEP DATA LIMIT (DAYS)
			RECORD CONFIG
		DEVICES	DEVICE
			ID
			PROTOCOL
			RATE
		NOTIFY	PUSH VIDEO
			MESSAGE MAIL
			VIDEO MAIL
	SCHEDULE SETTING	RECORD	
		DETECTION	
		ALARM	

APPENDIX 5 DVR BATTERY REPLACEMENT

DVR time reset after power failure, for example, caused by a power outage, will cause the disorder of the recorded data, and users may have problems in searching the event clip they want. To keep the DVR time from resetting, a non-chargeable lithium battery, *CR2032*, is installed in the DVR.

However, the DVR time might still get reset when the DVR battery is low or even running out of power. If so, please replace the DVR battery, CR2032, **right away** as instructed below.

➢ **How to replace CR2032**

Note: The lithium battery, CR2032, is a non-chargeable battery, and should be purchased separately. Please replace only with the same or equivalent type battery in case of danger.

Step1: Stop all DVR recording **immediately** to prevent the disorder of the recorded data. Then, back up the recorded data if necessary.

Step2: Power off the DVR, and disconnect the DVR power.

Step3: Remove the DVR cover, and find the battery on the mainboard.

Step4: Push the release as indicated below to remove the battery.

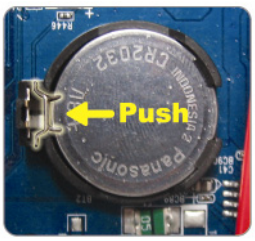

Type1

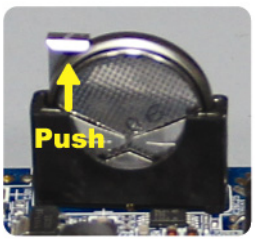

Type 2

Step5: Get a new battery and install it to its slot on the mainboard.

- For Type 1, install it with the side of “CR2032” facing up as shown above.
- For Type 2, install it without the side of “CR2032” facing you as shown above.

Step6: Replace the DVR cover and connect to power.

Step7: Set DVR date & time, and resume recording. For details, please refer to “2.5 Date and Time Setting” at page 9, and “5.3 Record” at page 23.

APPENDIX 6 PIN CONFIGURATION

A6. Models without HD video output

- **16CH**

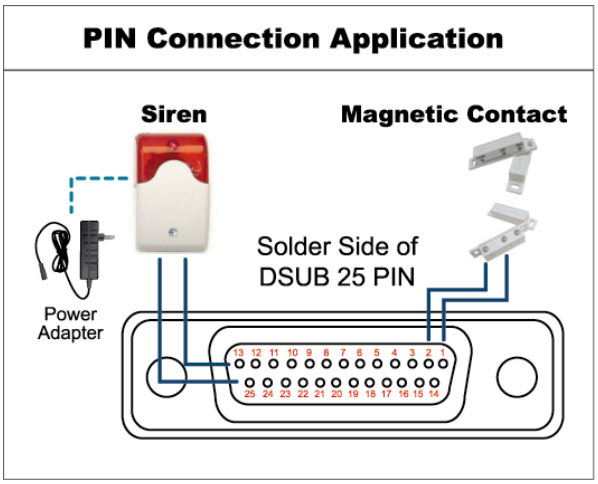

** The D-Sub connector shown above is optional.*

Siren:
When the DVR is triggered by alarm or motion, the COM connects with NO and the siren with strobe starts wailing and flashing.

Magnetic Contact:
When the magnetic contact is opened, the alarm will be triggered and the recording is on.

<table>
<tr><th>PIN</th><th>FUNCTION</th><th>DESCRIPTION</th></tr>
<tr><td>1</td><td>GND</td><td>GROUND</td></tr>
<tr><td>2~9</td><td>ALARM INPUT</td><td>Connect ALARM INPUT (PIN 2 -- 9) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on.
<table>
<tr><th>PIN</th><th>Alarm</th><th>Corresponding video channel</th></tr>
<tr><td>PIN 2</td><td>1</td><td>CH1</td></tr>
<tr><td>PIN 3</td><td>3</td><td>CH3</td></tr>
<tr><td>PIN 4</td><td>5</td><td>CH5</td></tr>
<tr><td>PIN 5</td><td>7</td><td>CH7</td></tr>
<tr><td>PIN 6</td><td>9</td><td>CH9</td></tr>
<tr><td>PIN 7</td><td>11</td><td>CH11</td></tr>
<tr><td>PIN 8</td><td>13</td><td>CH13</td></tr>
<tr><td>PIN 9</td><td>15</td><td>CH15</td></tr>
</table></td></tr>
<tr><td>10~11</td><td>PIN OFF</td><td>NA</td></tr>
<tr><td>12</td><td>RS485-A</td><td></td></tr>
<tr><td>13</td><td>EXTERNAL ALARM NO</td><td>Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO.
Attention: The voltage restriction is under DC24V 1A.</td></tr>
<tr><td>14</td><td>PIN OFF</td><td>NA</td></tr>
<tr><td>15~22</td><td>ALARM INPUT</td><td>Connect ALARM INPUT (PIN 15 – 22) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on.
<table>
<tr><th>PIN</th><th>Alarm</th><th>Corresponding video channel</th></tr>
<tr><td>PIN 15</td><td>2</td><td>CH2</td></tr>
<tr><td>PIN 16</td><td>4</td><td>CH4</td></tr>
<tr><td>PIN 17</td><td>6</td><td>CH6</td></tr>
<tr><td>PIN 18</td><td>8</td><td>CH8</td></tr>
<tr><td>PIN 19</td><td>10</td><td>CH10</td></tr>
<tr><td>PIN 20</td><td>12</td><td>CH12</td></tr>
<tr><td>PIN 21</td><td>14</td><td>CH14</td></tr>
<tr><td>PIN 22</td><td>16</td><td>CH16</td></tr>
</table></td></tr>
</table>

PIN	FUNCTION	DESCRIPTION
24	RS485-B	
25	EXTERNAL ALARM COM	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.

- **8CH**

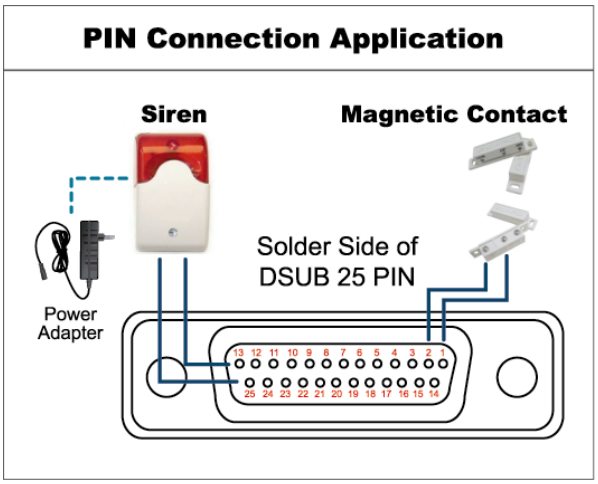

** The D-Sub connector shown above is optional.*

Siren:

When the DVR is triggered by alarm or motion, the COM connects with NO and the siren with strobe starts wailing and flashing.

Magnetic Contact:

When the magnetic contact is opened, the alarm will be triggered and the recording is on.

PIN	FUNCTION	DESCRIPTION
1	GND	GROUND
2~5	ALARM INPUT	Connect ALARM INPUT (PIN 2 – 5) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on. **PIN** / **Alarm** / **Corresponding video channel** PIN 2 / 1 / CH1 PIN 3 / 3 / CH3 PIN 4 / 5 / CH5 PIN 5 / 7 / CH7
6 ~ 11	PIN OFF	NA
12	RS485-A	
13	EXTERNAL ALARM NO.	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
14	PIN OFF	NA
15~18	ALARM INPUT	Connect ALARM INPUT (PIN 15 – 18) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on. **PIN** / **Alarm** / **Corresponding video channel** PIN 15 / 2 / CH2 PIN 16 / 4 / CH4 PIN 17 / 6 / CH6 PIN 18 / 8 / CH8
19~23	PIN OFF	NA
24	RS485-B	
25	EXTERNAL ALARM COM	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.

- **4CH**

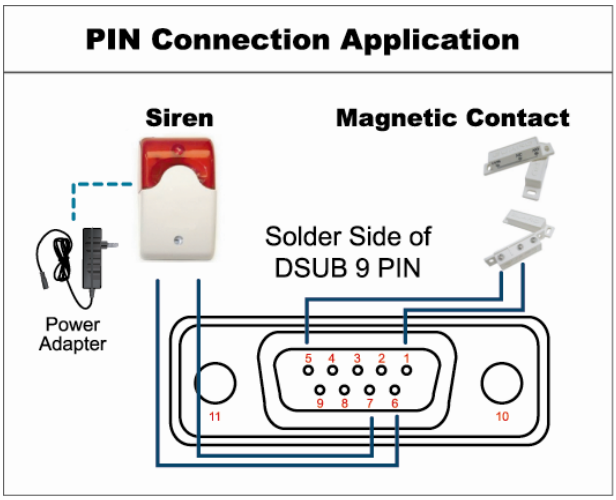

** The D-Sub connector shown above is optional.*

Siren:
When the DVR is triggered by alarm or motion, the COM connects with NO and the siren with strobe starts wailing and flashing.

Magnetic Contact:
When the magnetic contact is opened, the alarm will be triggered and the recording is on.

PIN	FUNCTION	DESCRIPTION
1~4	ALARM INPUT	Connect ALARM INPUT (PIN1 – 4) and GND (PIN5) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on.
5	GND	GROUND
6	EXTERNAL ALARM COM	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
7	EXTERNAL ALARM NO	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
8	RS485-A	
9	RS485-B	
10~11	GND	GROUND

PIN	Alarm	Corresponding video channel
PIN 1	1	CH1
PIN 2	2	CH2
PIN 3	3	CH3
PIN 4	4	CH4

A2. Models with HD video output

- **With 9-pin external I/O block**

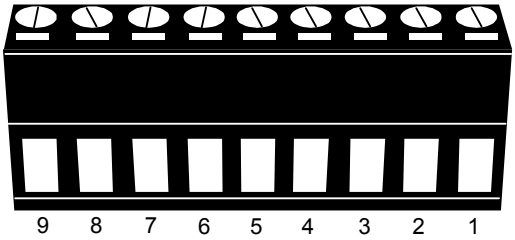

External I/O Block

PIN	FUNCTION	DESCRIPTION
1	GND	GROUND
2	RS485-A	
3	RS485-B	
4	EXTERNAL ALARM COM	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
5	EXTERNAL ALARM NO	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
6~9	ALARM INPUT	Connect ALARM INPUT (PIN 6 -- 9) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on.

PIN	Alarm	Corresponding video channel
PIN 6	1	CH1
PIN 7	2	CH2
PIN 8	3	CH3
PIN 9	4	CH4

*

- **With 7-pin external I/O block**

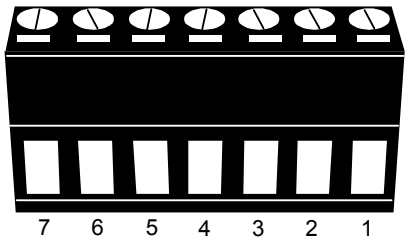

External I/O Block

PIN	FUNCTION	DESCRIPTION
1	GND	GROUND
2	RS485-A	
3	RS485-B	
4	EXTERNAL ALARM COM	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
5	EXTERNAL ALARM NO	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
6~7	ALARM INPUT	Connect ALARM INPUT (PIN 6 -- 7) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on. **PIN** / **Alarm** / **Corresponding video channel** PIN 6 / 1 / CH1 PIN 7 / 2 / CH2 *

- **With 6-pin external I/O block**

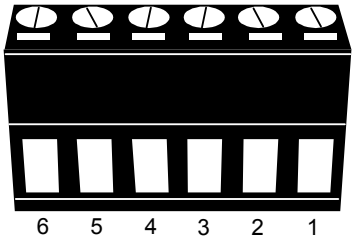

External I/O Block

PIN	FUNCTION	DESCRIPTION
1	GND	GROUND
2	RS485-A	
3	RS485-B	
4	EXTERNAL ALARM COM	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
5	EXTERNAL ALARM NO	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.
6	ALARM INPUT	Connect ALARM INPUT (PIN 6) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on. **PIN** / **Alarm** / **Corresponding video channel** PIN 6 / 1 / CH1 *

APPENDIX 7 MOBILE SURVEILLANCE VIA EAGLEEYES

EagleEyes is a mobile phone program used with our surveillance system for remote surveillance. It has several advantages:

- It's free (Except *EagleEyes Plus* for iPhone, and *EagleEyesHD Plus* for iPad).
- It's compatible with several popular mobile platforms, such as iPhone, iPad and Android.

It's easy to download, install and configure. For more details about configuring and operating this program, please visit our official website www.eagleeyescctv.com.

A7.1 Prerequisites

Before installing EagleEyes to your mobile phone for remote surveillance, make sure you have checked the following:

- ✓ Your mobile platform is iPhone, iPad & Android.
- ✓ Mobile Internet services are subscribed and available to use for your mobile phone.

Note: You might be charged for Internet access via wireless or 3G networks. For the Internet access rate details, please check with your local network operator or service provider.

- ✓ You have noted down the IP address, port number, user name and password used to access your network camera from Internet.

A7.2 Where to download

Connect to www.eagleeyescctv.com from your mobile device, and sign in.

Note: Please **DO NOT** try to download EagleEyes from your computer.

Select the mobile platform you're using to enter its individual download page.

Note: You can also find *EagleEyes* on "App Store" / "Play Store" from your iOS / Android mobile devices.

When the download is completed, *EagleEyes* will be installed automatically to the location where all applications are saved in your phone by default, or where you specify.

APPENDIX 8 DVD- / CD-ROM COMPATIBLE LIST

- **DVD-ROM List**

Disc Type	Manufacturer	Disc MID-TID Code
20X DVD+R	RITEK	RITEK R05 (rev:och)
16X DVD+R	SONY	SONY....-D21
	TAIYO YUDEN	YUDEN000-T03
	MITSUBISHI	MCC.....-004
	TDK	TDK.....-003
	MAXELL	MAXELL..003
	MBI	MBIPG101-R05
	CMC	CMC MAG.-M01
	DAXON	DAXON...-AZ3
	RITEK	RITEK...-R05
	PRODISC	PRODISC.-R05
8X DVD+R	TAIYO YUDEN	YUDEN000-T02
	MITSUBISHI	MCC.....-003
	CMC	CMC MAG.-E01
	PRODISC	PRODISC.-R03
8x DVD+RW	Ritek	RITEK...-008
	MITSUBISHI	MKM.....-A03
4X DVD+RW	SONY	SONY....-S11
	MITSUBISHI	MKM.....-A02
	RITEK	RITEK...-004
16X DVD+R9	RITEK	RITEK S06
8X DVD+R9	MITSUBISHI	MKM.....-003
	CMC	CMC MAG-D02
	RITEK	RITEK...-D03
2.4X DVD+R9	MITSUBISHI	MKM.....-001
20X DVD-R	RITEK	RITEKF-2
16x DVD-R	SONY	SONY16-D1
	TAIYO YUDEN	TYG03
	MITSUBISHI	MCC 03 RG20
	TDK	TTH02
	MAXELL	MXL RG04
	MBI	MBI 01-RG40
	CMC	CMC MAG.AM3
	RITEK	RITEK F1
8X DVD-R	RITEK	RITEKG 05
	SONY	SONY08 D1
	PRODISC	PRODISCS04
	TAIYO YUDEN	TYG02
	MITSUBISHI	MCC 02RG20
	TDK	TTH01
	MAXELL	MXL RG03
	CMC	CMC MAG.AE1

Disc Type	Manufacturer	Disc MID-TID Code
6X DVD-RW	MITSUBISHI	MCC 01RW6X01
	JVC	JVC1Victord7
	RITEK	RITEK W06
4X DVD-RW	MITSUBISHI	MCC 01RW4X
	TDK	TDK601saku
	RITEK	RITEKW04
2X DVD-RW	MITSUBISHI	MCC 01RW11N9
	JVC	JVC_VictorW7
	TDK	TDK502 sakuM3
	CMC	CMCW02
	RITEK	RITEK W01
12X DVD-R9	MKM	MKM 04 RD30
8X DVD-R9	TY	TYG11
	MITSUBISHI	MKM 03 RD30
	RITEK	RITEKP 02
4X DVD-R9	MITSUBISHI	MKM 01 RD30
	RITEK	RITEKP 01
12X DVD-RAM	MAXELL	MXL22.
5X DVD-RAM	Matsushita	Matsushita-M01J5006
	MAXELL	MXL16.
3X DVD-RAM	MAXELL	MXL9.
	Matsushita	Matsushita-M01J3003

- **CD-ROM List**

Disc Type	Manufacturer	Disc Type	Manufacturer
52X CD-R	MCC	12X CD-RW	MCC
	MBI		MBI
	TAIYO YUDEN		DAXON
	RITEK		RITEK
	UME		MCC
	PRODISC		DAXON
	DAXON		Lead Data
	TDK		PRINCO
	CMC	10X CD-RW	CMC
	Princo	4X CD-RW	MCC
	Lead Data		DAXON
	Postec		CMC
	Giga		RITEK
32X CD-R	TAIYO YUDEN		DAXON
24X CD-RW	MCC	4X CD-RW (8 cm)	INFODISC
	INFODISC		

APPENDIX 9 DVD WRITER INSTALLATION

Some DVR models allow users to install a DVD writer by themselves. To know whether your DVR supports this feature, please check with your local distributor or retailer.

The supported DVD writer models are as follows. Please use only the suggested DVD writer models to ensure the compatibility.

Type	Brand	Model
SATA	Liteon	iHAS120
	SONY	AD-7240S

Note: Before installing the DVD writer, make sure your DVR is powered off and your DVR supports this feature.

Step1: Remove the DVR cover, and find the DVD writer bracket to remove it.

Step2: Put the DVD writer in the bracket, and fix it to the bracket with two screws (optional) on each side.

Step3: Connect the data bus and power cables* to the SATA DVD writer.

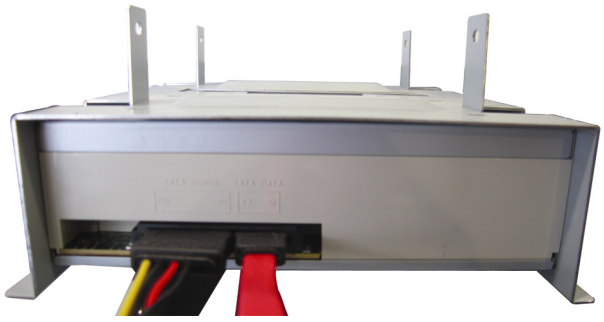

**Data bus & power cables are optional.*

Step4: Connect the data bus and power cables to the data bus and power jack on the DVR main board.

Note: Make sure the power cable of the DVD writer is plugged into the ***black*** jack on the DVR main board. This power jack can supply power to one hard disk and one DVD writer simultaneously. The white jack is used to supply power to only one hard disk.

Step5: Replace the bracket to the DVR base and fix it.